



# 3M™ 7500 Series Half Mask

## Care and Maintenance



To maintain protection levels, optimise the effective lifetime of the equipment and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Reusable Respirators.

### Before Use

- Inspect respirator for incorrectly fitted and/or damaged parts. Replace if necessary
- Inspect the exhalation valve and seat. Any damaged or deteriorated valves should be replaced

### Monthly

- Carry out all the 'Before Use' inspections
- Check:
  - Face Seal
  - Straps and Head harness
  - Valves
- Create record of this monthly check

### After Use


- Cleaning is recommended after each use
- Remove the gas/vapour and/or particulate filters
- Clean with 3M™ 105 wipe or by immersing in warm cleaning solution, water temperature not to exceed 50°C and scrub with a soft brush until clean
- Rinse in fresh warm water
- Air dry in a non-contaminated atmosphere

### Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

### Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M™ Reusable Respirators, please contact the Helpline or your local 3M representative.

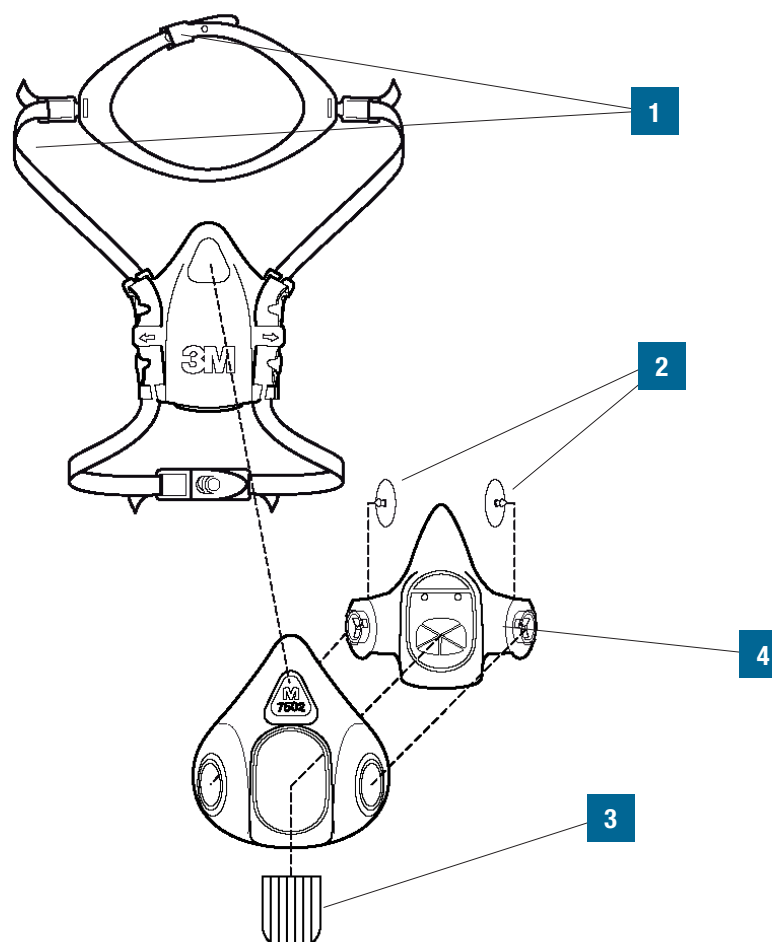

		3M Part Number
1	Head Harness	7581
2	Inhale Valve	7582
3	Exhale Valve	7583
4	Filter Holder	7586

### Occupational Health & Environmental Safety Group

**3M United Kingdom plc**  
3M Centre,  
Cain Road, Bracknell  
Berkshire RG12 8HT  
Tel: 0870 60 800 60  
www.3M.co.uk/ohes

**3M Ireland Limited**  
The Iveagh Building  
The Park  
Carrickmines  
Dublin 18  
Tel: 1 800 320 500

3M is a trademark of 3M Company  
Please recycle. Printed in UK.  
© 3M 2010. All rights reserved.

**REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE CORRECT LEVELS OF PROTECTION**