

Monitor for continuous measurement of dissolved oxygen in high purity water.


**Monitor AMI Oxytrace (QV-Flow)**

Complete system mounted on stainless steel panel:

- **Transmitter AMI Oxytrace** in a rugged aluminum enclosure (IP 66).
- **Flow cell QV-Flow PMMA OTG** made of acrylic glass with needle valve and digital sample flow meter on mounting angle made of stainless steel.
- **Swansensor Oxytrace G** with three electrode set-up (cathode, anode and guard) and integrated NT5k temperature sensor.
- Factory tested, ready for installation and operation.

**Specifications:**

- Measuring range:  
0 - 20 ppm O<sub>2</sub> (at 25°C) or  
0 - 200% saturation
- Automatic air pressure compensation
- Automatic temperature compensation
- Faster run-in time due to silver guard
- Simultaneous measurement of dissolved oxygen, sample temperature and sample flow.
- Big backlit LC display for the reading of measuring value, sample temperature, sample flow and operating status.
- Easy user menus in English, German, French and Spanish. Simple programming of all parameters by keypad.
- Two current outputs (0/4 - 20 mA) for measured signals (3<sup>rd</sup> output optional).
- Electronic record of major process events and calibration data

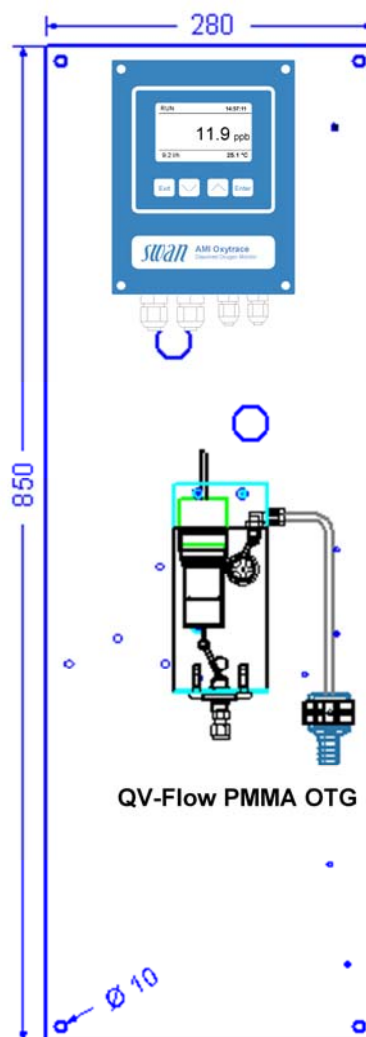

Order scheme	Monitor AMI Oxytrace / QV-Flow	A	2	2	4	0	0
<b>Power supply</b> .....	85 - 265 VAC / 47 - 63 Hz .....						
	24 VDC, direct current .....						
<b>Signal output option</b> .....	None .....						
	Third current signal output 0/4 - 20 mA .....						
	Profibus DP interface .....						
	HyperTerminal interface (for logger download) .....						
	Modbus interface (for <i>Webserver</i> connection) .....						

**Dissolved Oxygen Measurement**

**Swansensor Oxytrace G** with three electrode set-up (cathode [gold], anode [silver] and guard [silver]) with integrated NT5k temperature sensor.

<b>Measuring range</b>	<b>Resolution</b>
0 to 9.99 ppb	0.01 ppb
10 to 199.9 ppb	0.1 ppb
200 to 1999 ppb	1 ppb
2 to 20 ppm	0.01 ppm
0-200% saturation	0.1% saturation
Automatic range switching	

Automatic temperature and air pressure compensation

**Accuracy / Precision**

Accuracy: ± 1.5% of reading or ± 0.2 ppb  
Precision: ± 1% of reading or ± 0.15 ppb

**Response time**

t<sub>90</sub> < 30 sec. (rising concentration)


**Temperature measurement NT5k**

Measuring range: -30 to +130 °C  
Resolution: 0.1 °C

**Sample flow measurement**

With digital SWAN sample flow sensor

**Electrical Connection Scheme**

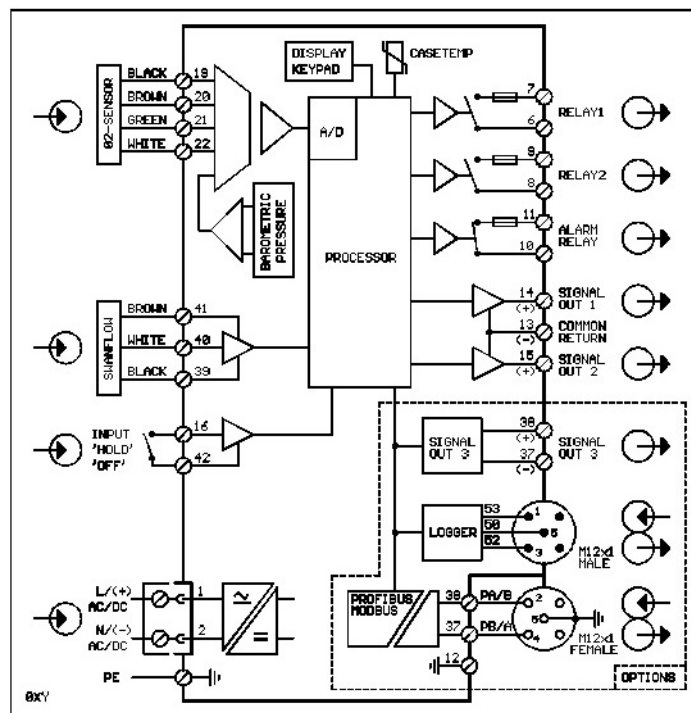

**Transmitter Specifications and Functionality**

Electronics case: Cast aluminum  
Protection degree: IP 66 / NEMA 4X  
Display: backlit LCD, 75 x 45 mm  
Electrical connectors: screw clamps  
Dimensions: 180 x 140 x 70 mm  
Weight: 1.5 kg  
Ambient temperature: -10 to +50 °C  
Humidity: 10 - 90% rel., non condensing

**Power supply**

Voltage: 85 - 265 VAC, 47 - 63 Hz  
or 24 VDC, ± 15 %  
Power consumption: max. 20 VA

**Operation**

Easy operation based on separate menus for "Messages", "Diagnostics", "Maintenance", "Operation" and "Installation".  
User menus in English, German, French and Spanish.  
Separate menu specific password protection.  
Display of process value, sample flow, alarm status and time during operation.  
Storage of event log, alarm log and calibration history.  
Storage of the last 1'500 data records in logger with selectable time interval.

**Safety features**

No data loss after power failure, all data is saved in non-volatile memory.  
Over-voltage protection of in- and outputs.  
Galvanic separation of measuring inputs and signal outputs.

**Transmitter temperature monitoring with programmable high/low alarm limits.**

**1 Alarm relay**

One potential free contact for summary alarm indication for programmable alarm values and instrument faults.  
Maximum load: 1A / 250 VAC

**1 Input**

One input for potential-free contact.  
Programmable hold or remote off function.

**2 Relay outputs**

Two potential-free contacts programmable as limit switches for measuring values, controllers or timer for system cleaning with automatic hold function.  
Rated load: 1A / 250 VAC

**2 Signal outputs (3<sup>rd</sup> as option)**

Two programmable signal outputs for measured values (freely scaleable, linear or bilinear) or as continuous control output (control parameters programmable).  
Current loop: 0/4 - 20 mA  
Maximum burden: 510 Ω

**Control functions**

Relays or current outputs programmable for 1 or 2 pulse dosing pumps, solenoid valves or for one motor valve.  
Programmable P, PI, PID or PD control parameters.

**1 Communication interface (option)**

RS232 interface for logger download to PC with Microsoft HyperTerminal or RS485 interface (galvanically separated) with Fieldbus protocol Modbus or Profibus DP.

**Monitor Data**

**Sample conditions**

Flow rate: 6 to 25 l/h  
Temperature: up to 45 °C  
Inlet pressure: 0.2 to 1 bar  
Outlet pressure: pressure free  
pH: not lower than pH 4  
Suspended solids: less than 10 ppm

**Flow cell and connections**

Flow cell made of acrylic glass with built-in flow adjustment valve and digital sample flow meter  
Sample inlet: Swagelok ¼" tube adapter  
Sample outlet: for flexible tube Ø 20 x 15 mm

**Panel**

Dimensions: 850 x 280 x 150 mm  
Material: stainless steel  
Total weight: 12.0 kg