


Optional module for the automatic, chemical cleaning of flow cell and photometer. To use conjointly with the AMI Codes and AMI Codes TC disinfectant monitoring systems.

Cleaning Module

- Chemical cleaning of the AMI Codes flow cell is achieved with periodical additions of a cleaning solution, e.g. Javel water or diluted sulfuric acid.
- Especially useful for disinfectant monitoring in water with biological growth.
- Complete system installed on mounting panel including control electronics, reagent dosing system and reagent container with level sensor.
- Cleaning interval and duration is controlled by AMI Codes (TC) transmitter.
- During the cleaning process the AMI Codes (TC) transmitter stays in hold mode.
- Power supply is through AMI Codes (TC) monitor.
- Panel made of PVC
Dimensions: 850 x 170 x 200 mm
- Factory tested and ready for installation.

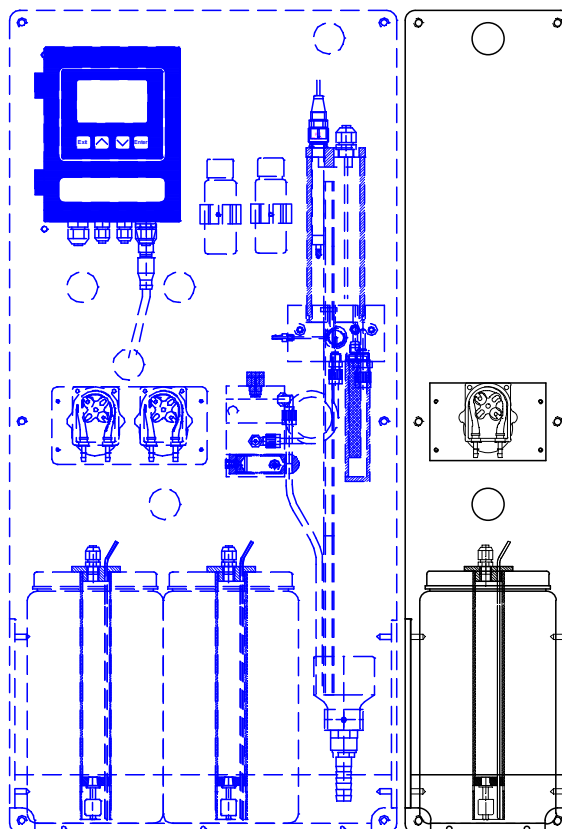

Monitor AMI Codes with Cleaning Module

| | | |
|------------------|------------------------|--------------------------------|
| Order no. | Cleaning Module | A - 8 2 . 3 1 1 . 0 0 0 |
|------------------|------------------------|--------------------------------|