




DOC343.52.90477

# TU5300 sc/TU5400 sc

08/2016, Edition 3

**User Manual**

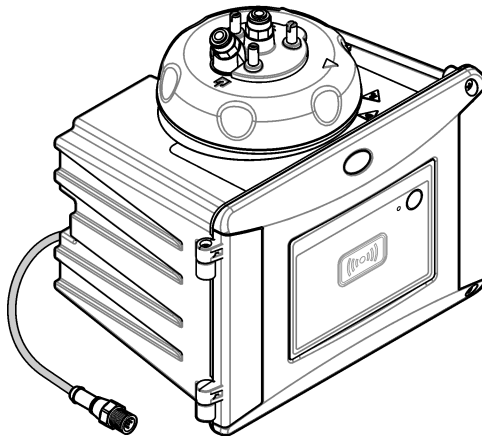



<b>Specifications</b>	3
<b>General information</b>	4
Safety information	4
Use of hazard information	5
Precautionary labels	5
Class 1 laser product	5
RFID module	6
Safety information for RFID modules	6
FCC conformance for RFID	7
Certification	7
Product overview	8
Status indicator light	9
Product components	10
<b>Installation</b>	11
Installation guidelines	11
Installation overview	11
Wall mount	13
Install with the wall mount bracket	13
Install directly on a wall	14
Install the desiccant cartridge	15
Replace the cleaning lid screws	17
Install the service bracket	17
Install the flow sensor (optional)	17
Install the automatic cleaning module (optional)	17
Connect to an SC controller	17
Plumbing	18
Plumb the instrument	18
<b>User navigation</b>	21
<b>Operation</b>	21
Configure the instrument	21
Show instrument information	22
Compare process and laboratory measurements	23
Collect a grab sample	23
Compare measurements with RFID	23
Compare measurements with Link2SC	23
Configure the Link2SC settings	25
<b>Calibration</b>	25
<b>Verification</b>	25
Show the calibration or verification history	25
<b>Maintenance</b>	25
Maintenance schedule	26
Clean spills	26
Clean the instrument	27
Clean the vial	27

**Table of Contents**

Clean the vial with the optional wiper .....	28
Clean the vial compartment .....	28
Replace the vial .....	29
Replace the desiccant cartridge .....	31
Replace the tubing .....	31
<b>Troubleshooting .....</b>	<b>31</b>
Reminders .....	31
Warnings .....	31
Errors .....	32
<b>Replacement parts and accessories .....</b>	<b>33</b>

## Specifications

Specifications are subject to change without notice.

Specification	Details
Measurement method	Nephelometry with scattered light collected at a 90-degree angle to the incident light and 360 degrees around the sample vial
Primary compliance method	DIN EN ISO 7027
Enclosure	Material: ASA Luran S 777K / RAL7000, TPE RESIN Elastocon® STK40, Thermoplastic Elastomer TPS-SEBS (60 Shore) and stainless steel
Dimensions (W x D x H)	268 x 249 x 190 mm (10.6 x 9.8 x 7.5 in.)
Weight	Instrument with the process head: 2.7 kg (6.0 lb); Instrument with the optional automatic cleaning module: 5.0 kg (11.0 lb)
Power requirements	12 VDC, 14 VA supplied by the SC controller
Protection class	III
Pollution degree	2
Installation category	II
Mounting	Indoor on a wall
Operating temperature	0 to 50 °C (32 to 122 °F)
Storage temperature	–40 to 60 °C (–40 to 140 °F)
Humidity	5 to 95% relative humidity, non-condensing
Sensor cable length	1.6 m (5.25 ft) <sup>1</sup>
Laser	<b>Class 1 laser product:</b> Contains a non user-serviceable class 1 laser.
Optical light source	850 nm, maximum 0.55 mW
Fittings	Sample inlet and outlet: ¼-in. OD tubing
Tubing requirements	Polyethylene, polyamide or polyurethane tubing. Calibrated ¼ in. OD, +0.03 or –0.1 mm (+0.001 or –0.004 in.)
Measurement units	TU5300 sc: NTU, FNU, TE/F, EBC or FTU; TU5400 sc: NTU, mNTU <sup>2</sup> , FNU, mFNU, TE/F, EBC, FTU or mFTU.
Range	0 to 1000 NTU, FNU, TE/F and FTU; 0 to 250 EBC
Method detection limit	TU5300 sc: 0.002 FNU at 25 °C (77 °F) ( < 0.025 FNU range); TU5400 sc: 0.0001 FNU at 25 °C (77 °F) ( < 0.025 FNU range)
Response time	T90 < 30 seconds at 100 mL/min
Accuracy	± 2% or ± 0.01 FNU (the larger value) from 0 to 40 FNU ± 10% of reading from 40 to 1000 FNU based on Formazin primary standard at 25 °C (77 °F)
Linearity	Better than 1% for 0 to 40 NTU based on Formazin primary standard at 25 °C (77 °F).

<sup>1</sup> Extension cables are available. The maximum sensor cable length is 50 m (164 ft) when no accessories are connected to the instrument.

<sup>2</sup> 1 mNTU = 0.001 NTU

Specification	Details
Repeatability	TU5300 sc: 0.002 FNU or 1% (the larger value) at 25 °C (77 °F) ( > 0.025 FNU range); TU5400 sc: 0.0006 FNU or 1% (the larger value) at 25 °C (77 °F) ( > 0.025 FNU range)
Stray light	< 0.01 FNU
Resolution	0.0001 FNU (0.0001 to 0.9999/1.000 to 9.999/10.00 to 99.99/100.0 to 1000 FNU) Default: TU5300 sc: 0.001 FNU and TU5400 sc: 0.0001 FNU
Air bubble compensation	Physical, mathematical
Sample requirements	Temperature: 2 to 60 °C (35.6 to 140 °F) Conductivity: 3000 µS/cm maximum at 25 °C (77 °F) Flow rate <sup>3</sup> : 100 to 1000 mL/min; optimal flow rate: 200 to 500 mL/min Pressure: 6 bar (87 psi) maximum compared to air, 2 to 40 °C (35.6 to 104 °F) sample; 3 bar (43.5 psi) maximum compared to air, 40 to 60 °C (104 to 140 °F) sample
Calibration options	StablCal® or Formazin: 1-point calibration (20 FNU) for 0 to 40 FNU measurement range, 2-point calibration (20 and 600 FNU) for 0 to 1000 FNU (full) measurement range or 2- to 6-point custom calibration for a measurement range of 0 FNU to the highest calibration point.
Verification options	Glass verification rod (solid secondary standard) ≤ 0.1 NTU, StablCal or Formazin
Verification (RFID or Link2SC®)	Verification of the measurement value by comparison of the process and lab measurements with RFID or Link2SC.
Certifications	CE compliant; US FDA accession number: 1420492-xxx. This product complies with IEC/EN 60825-1 and to 21 CFR 1040.10 in accordance with Laser Notice No. 50. Australian RCM.
Warranty	1 year (EU: 2 years)

## General information

In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages resulting from any defect or omission in this manual. The manufacturer reserves the right to make changes in this manual and the products it describes at any time, without notice or obligation. Revised editions are found on the manufacturer's website.

## Safety information

### NOTICE

The manufacturer is not responsible for any damages due to misapplication or misuse of this product including, without limitation, direct, incidental and consequential damages, and disclaims such damages to the full extent permitted under applicable law. The user is solely responsible to identify critical application risks and install appropriate mechanisms to protect processes during a possible equipment malfunction.

Please read this entire manual before unpacking, setting up or operating this equipment. Pay attention to all danger and caution statements. Failure to do so could result in serious injury to the operator or damage to the equipment.

Make sure that the protection provided by this equipment is not impaired. Do not use or install this equipment in any manner other than that specified in this manual.








<sup>3</sup> For the best results, operate the instrument at a flow rate of 200 mL/min for a maximum particle size of 20 µm. For larger particles (50 µm maximum), a higher sample flow rate is necessary.

## Use of hazard information

<b>⚠ DANGER</b>	
Indicates a potentially or imminently hazardous situation which, if not avoided, will result in death or serious injury.	
<b>⚠ WARNING</b>	
Indicates a potentially or imminently hazardous situation which, if not avoided, could result in death or serious injury.	
<b>⚠ CAUTION</b>	
Indicates a potentially hazardous situation that may result in minor or moderate injury.	
<b>NOTICE</b>	
Indicates a situation which, if not avoided, may cause damage to the instrument. Information that requires special emphasis.	


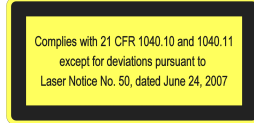
## Precautionary labels

Read all labels and tags attached to the instrument. Personal injury or damage to the instrument could occur if not observed. A symbol on the instrument is referenced in the manual with a precautionary statement.

	Electrical equipment marked with this symbol may not be disposed of in European domestic or public disposal systems. Return old or end-of-life equipment to the manufacturer for disposal at no charge to the user.
	This symbol, if noted on the instrument, references the instruction manual for operation and/or safety information.
	This symbol indicates the need for protective eye wear.
	This symbol indicates a laser device is used in the equipment.
	This symbol indicates that the marked item can be hot and should not be touched without care.
	This symbol identifies a risk of chemical harm and indicates that only individuals qualified and trained to work with chemicals should handle chemicals or perform maintenance on chemical delivery systems associated with the equipment.
	This symbol indicates radio waves.

## Class 1 laser product

<b>⚠ DANGER</b>	
	Personal injury hazard. Never remove covers from the instrument. This is a laser-based instrument and the user risks injury if exposed to the laser.

 <p>CLASS 1 LASER PRODUCT IEC60825-1:2014 850nm / max. 0,55mW</p>	<p>Class 1 laser product, IEC60825-1:2014, 850 nm, maximum 0.55 mW Location: Rear of the instrument.</p>
 <p>Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007</p>	<p>Conforms to U.S. regulations 21 CFR 1040.10 and 1040.11 in accordance with Laser Notice No. 50. Location: Rear of the instrument.</p>

This instrument is a Class 1 Laser product. There is invisible laser radiation when the instrument is defective and when the instrument lid is open. This product complies with EN 61010-1, "Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use" and with IEC/EN 60825-1, "Safety of Laser Products" and with 21 CFR 1040.10 in accordance with Laser Notice No. 50. Refer to the labels on the instrument that supply laser information.

### RFID module


Instruments with the optional RFID module receive and transmit information and data. The RFID module operates with a frequency of 13.56 MHz.


RFID technology is a radio application. Radio applications are subject to national conditions of authorization. The use of instruments with the optional RFID module is currently permitted in the regions that follow:

Turkey, Serbia, Macedonia, Australia, Canada, US, Chile, Ecuador, Venezuela, Mexico, Brazil, South Africa, India, Singapore, Argentina, Columbia, Peru and Panama

The use of instruments with the optional RFID module outside of the above-mentioned regions can violate national laws. The manufacturer reserves the right also to get authorization in other countries. In case of doubt, contact the manufacturer.

### Safety information for RFID modules

<b>⚠ WARNING</b>	
	Multiple hazards. Do not disassemble the instrument for maintenance. If the internal components must be cleaned or repaired, contact the manufacturer.

<b>⚠ WARNING</b>	
	Electromagnetic radiation hazard. Do not use the instrument in dangerous environments.

<b>NOTICE</b>	
This instrument is sensitive to electromagnetic and electromechanical interference. These interferences can have an effect on the analysis performance of this instrument. Do not put this instrument near equipment that can cause interference.	

Obey the safety information that follows to operate the instrument in accordance with local, regional and national requirements.

- Do not operate the instrument in hospitals and equivalent establishments or near medical equipment, such as pace makers or hearing aids.
- Do not operate the instrument near highly flammable substances, such as fuels, highly flammable chemicals and explosives.
- Do not operate the instrument near combustible gases, vapors or dust.
- Keep the instrument away from strong vibration or shock.



- The instrument can cause interference in immediate proximity to televisions, radios and computers.
- The warranty does not cover improper use or wear.

**FCC conformance for RFID**

This instrument may contain a registered radio frequency identification device (RFID). Refer to [Table 1](#) for the Federal Communications Commission (FCC) registration information.

**Table 1 Registration information**

Parameter	Value
FCC identification number (FCC ID)	YCB-ZBA987
IC	5879A-ZBA987
Frequency	13.56 MHz

**Certification**

**Canadian Radio Interference-Causing Equipment Regulation, IECS-003, Class A:**

Supporting test records reside with the manufacturer.

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de classe A répond à toutes les exigences de la réglementation canadienne sur les équipements provoquant des interférences.

**FCC Part 15, Class "A" Limits**

Supporting test records reside with the manufacturer. The device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. The equipment may not cause harmful interference.
2. The equipment must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their expense. The following techniques can be used to reduce interference problems:

1. Disconnect the equipment from its power source to verify that it is or is not the source of the interference.
2. If the equipment is connected to the same outlet as the device experiencing interference, connect the equipment to a different outlet.
3. Move the equipment away from the device receiving the interference.
4. Reposition the receiving antenna for the device receiving the interference.
5. Try combinations of the above.

## Product overview

### **⚠ DANGER**



Chemical or biological hazards. If this instrument is used to monitor a treatment process and/or chemical feed system for which there are regulatory limits and monitoring requirements related to public health, public safety, food or beverage manufacture or processing, it is the responsibility of the user of this instrument to know and abide by any applicable regulation and to have sufficient and appropriate mechanisms in place for compliance with applicable regulations in the event of malfunction of the instrument.

The TU5300 sc and the TU5400 sc turbidimeters are used with an SC controller to measure low-range turbidity mostly in finished drinking water applications. Refer to [Figure 1](#).

The TU5300 sc and the TU5400 sc turbidimeters measure scattered light at an angle of 90° in a 360° radius around the axis of the incident light beam.


An optional RFID module and an automatic system check option are available. The RFID module is shown in [Figure 1](#). The RFID module lets process and laboratory turbidity measurements be easily compared. A description of the automatic system check option is given in [Configure the instrument](#) on page 21.

PROGNOSYS predictive diagnostic software is available for the TU5300 sc and TU5400 sc turbidimeters. To use PROGNOSYS, connect the turbidimeter to an SC controller with PROGNOSYS.

Videos on how to install, operate and do maintenance and troubleshooting on the TU5300 sc and the TU5400 sc turbidimeters are available on the *TU5 Series Turbidimeters* playlist at <http://www.youtube.com/user/hachcompany>.

The accessories are shown in [Installation overview](#) on page 11.

**Figure 1 Product overview**

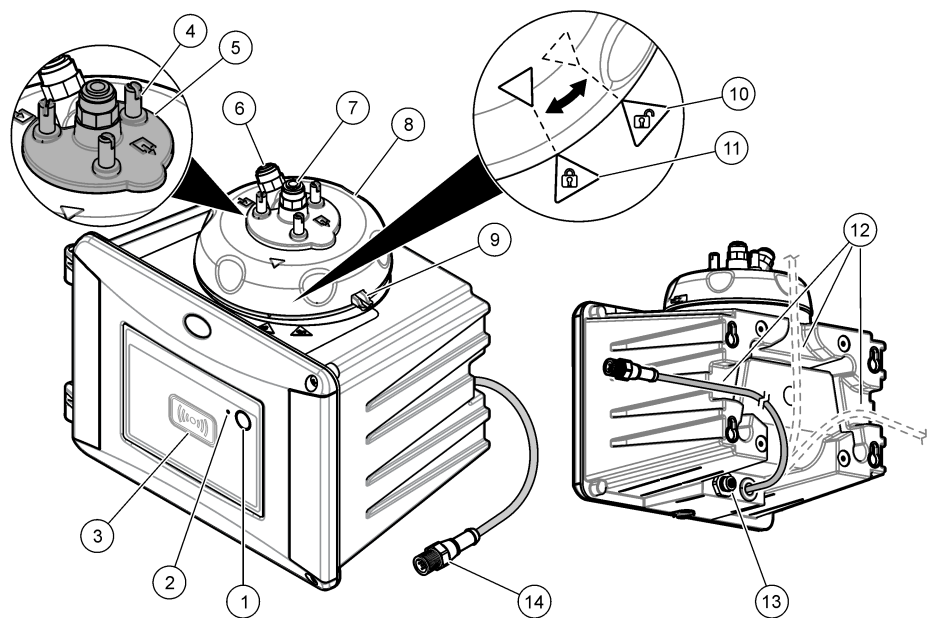

1 Programmable button	8 Process head
2 Status indicator light (refer to <a href="#">Status indicator light</a> on page 9)	9 Overflow drain
3 RFID module indicator (optional)	10 Process head (open)
4 Cleaning lid screws (3x)	11 Process head (closed)
5 Cleaning lid	12 Channels for cables
6 Sample inlet	13 Extension connector for accessories
7 Sample outlet	14 Sensor cable

### Status indicator light

The status indicator light shows the instrument status. Refer to [Table 2](#) for status descriptions.

**Note:** The status indicator light is only on when the SC controller power is set to on and the sensor cable is connected to the sc controller.

**Table 2 Status indicator light**

Color	Status
Green (stable)	The instrument is in operation. The instrument status is ok—no warnings, errors or reminders.
Green (flashes)	Calibration is complete. The instrument status is ok.
	Verification is complete. The instrument status is ok.
Yellow (stable)	Read the warning that shows on the controller display. Refer to <a href="#">Warnings</a> on page 31 for the warning description and solution.
Yellow (flashes)	The instrument is in Service Mode.
	An automatic cleaning is in progress.


**Table 2 Status indicator light (continued)**

Color	Status
Yellow (flashes slow)	The optional flow sensor has identified that there is no sample flow or the sample flow is lower than the limit. Read the warning that shows on the controller display. Refer to <a href="#">Warnings</a> on page 31 for the warning description and solution.
Yellow (flashes fast)	The optional flow sensor has identified that the sample flow rate is higher than the limit. Read the warning that shows on the controller display. Refer to <a href="#">Warnings</a> on page 31 for the warning description and solution.
Red (stable)	Read the error that shows on the controller display. Refer to <a href="#">Errors</a> on page 32 for the error description and solution.
Red (flashes)	Calibration or verification was not completed.  The instrument cannot start calibration or verification for one or more reason that follows. <ul style="list-style-type: none"> <li>• The standard expired.</li> <li>• The first measurement of the verification standard was done with a different method (EPA/ISO).</li> <li>• The first measurement value of the verification standard is missing.</li> </ul>
Blue (stable)	A calibration or verification is started.
Blue (flashes)	A calibration or verification measurement is started.
Blue (flashes fast)	A calibration or verification is started with RFID.

## Product components

Make sure that all components have been received. Refer to [Figure 2](#). If any items are missing or damaged, contact the manufacturer or a sales representative immediately.

**Figure 2 Product components**

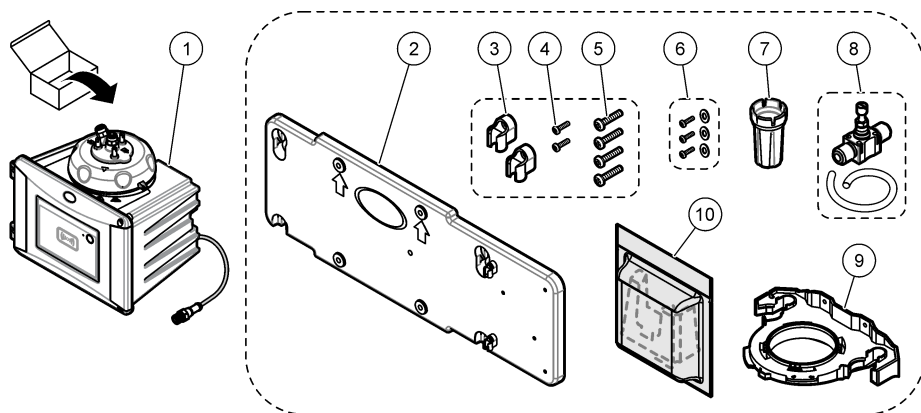

1 TU5300 sc or TU5400 sc	6 Cleaning lid screws and washers for hot water applications
2 Wall mount bracket (two tubing clips on bracket)	7 Vial replacement tool
3 Tubing clips	8 Flow regulator
4 Tubing clip screws, 2.2 x 6 mm	9 Service bracket
5 Mounting screws, 4 x 16 mm	10 Desiccant cartridge

# Installation

## ⚠ CAUTION



Multiple hazards. Only qualified personnel must conduct the tasks described in this section of the document.

## Installation guidelines

### NOTICE


Make sure that there is a floor drain near the instrument. Examine the instrument daily for leaks.

This instrument is rated for an altitude of 3100 m (10,710 ft) maximum. Use of this instrument at an altitude higher than 3100 m can slightly increase the potential for the electrical insulation to break down, which can result in an electric shock hazard. The manufacturer recommends that users with concerns contact technical support.

## Installation overview

[Figure 3](#) shows the installation overview with all of the accessories and the clearances necessary.

**Figure 3** Installation overview with accessories

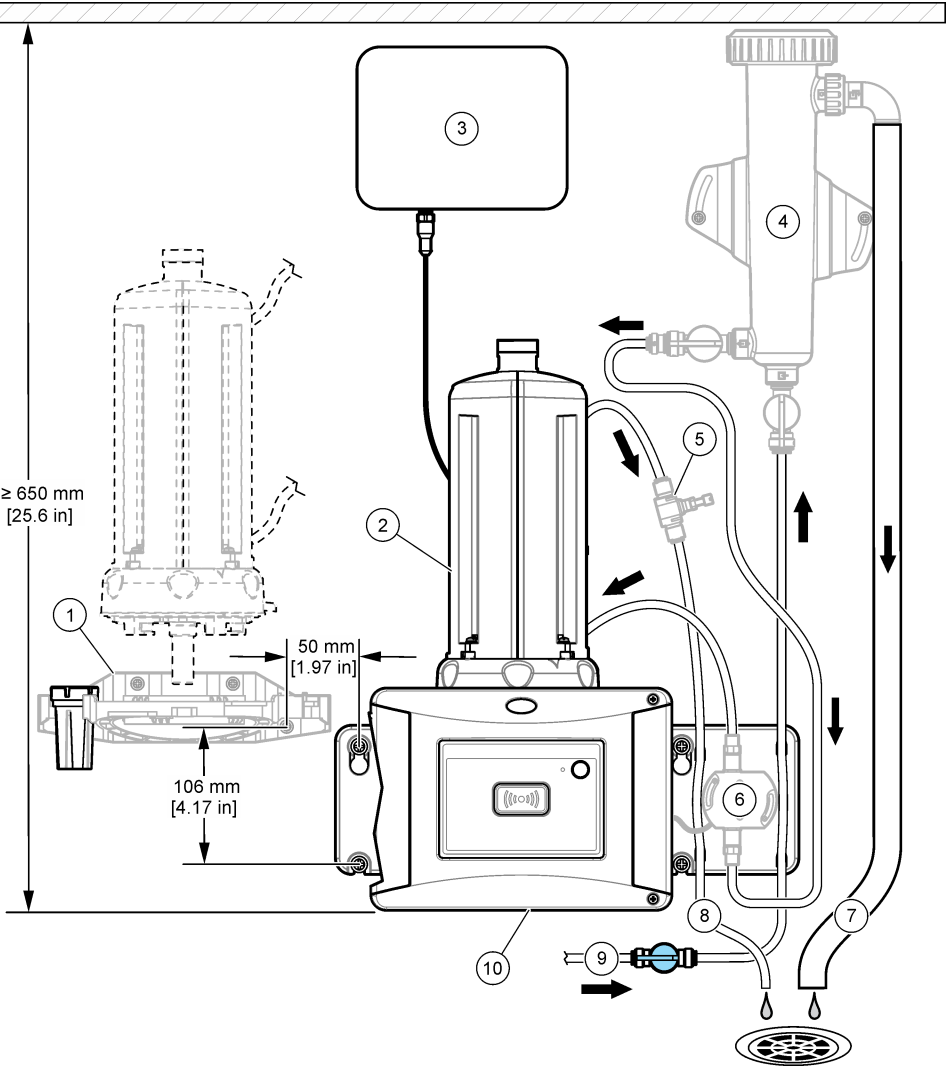

1 Service bracket	6 Flow sensor (accessory)
2 Automatic cleaning module (accessory)	7 Bubble trap overflow
3 SC controller	8 Sample outlet
4 Bubble trap (accessory)	9 Sample inlet
5 Flow regulator <sup>4</sup>	10 TU5300 sc or TU5400 sc

<sup>4</sup> Not used with the bubble trap.

# Wall mount


Install the instrument on a wall in a vertical position. Install the instrument so that it is level.



## Install with the wall mount bracket

Refer to the illustrated steps that follow to install the instrument on a wall with the wall mount bracket. The mounting hardware to install the wall mount bracket on a wall is supplied by the user.

If a 1720D, 1720E, or FT660 instrument is replaced, remove the instrument from the wall. Then do steps 2 to 4 of the illustrated steps that follow to install the instrument on the existing hardware.



**Note:** When the accessories are used, the installation location of the tubing clips is different. Refer to the documentation supplied with the accessories for tubing clip installation.

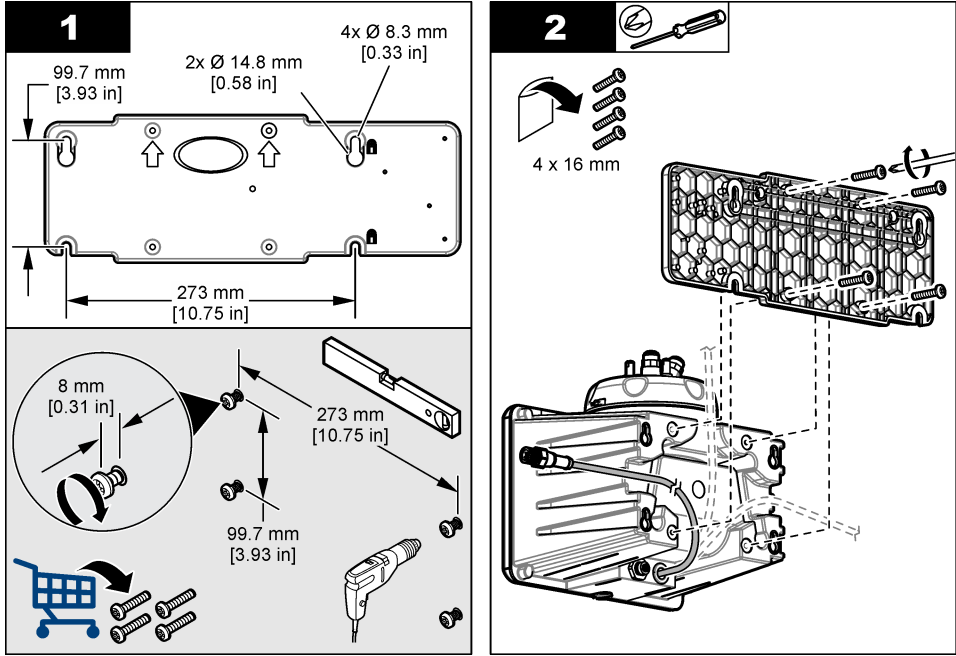

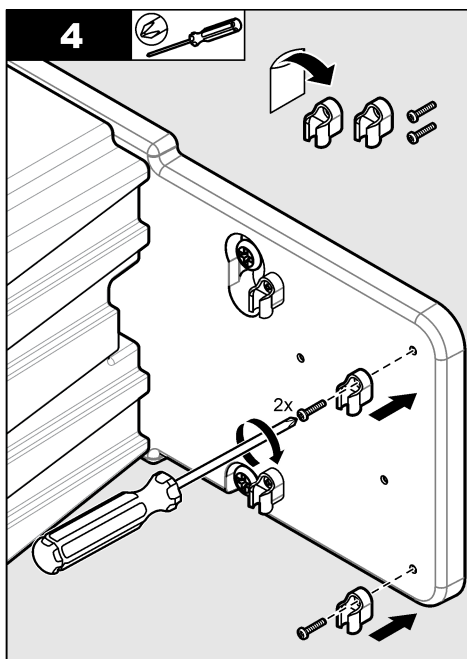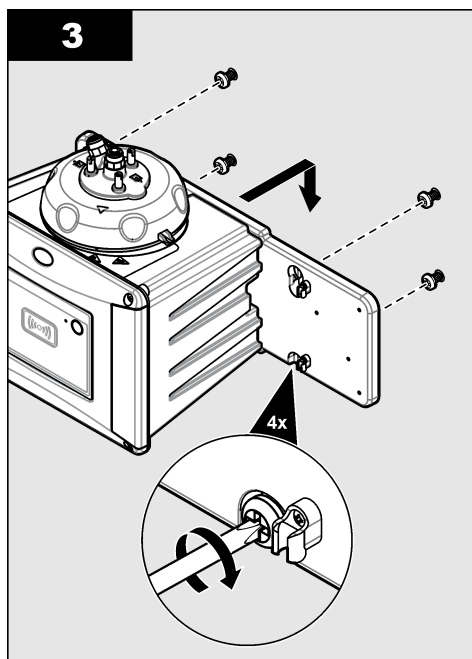

### Install directly on a wall

As an alternative, refer to the illustrated steps that follow to install the instrument directly on a wall. The mounting hardware is supplied by the user. Remove the thin, plastic film from the mounting holes on the back of the instrument.

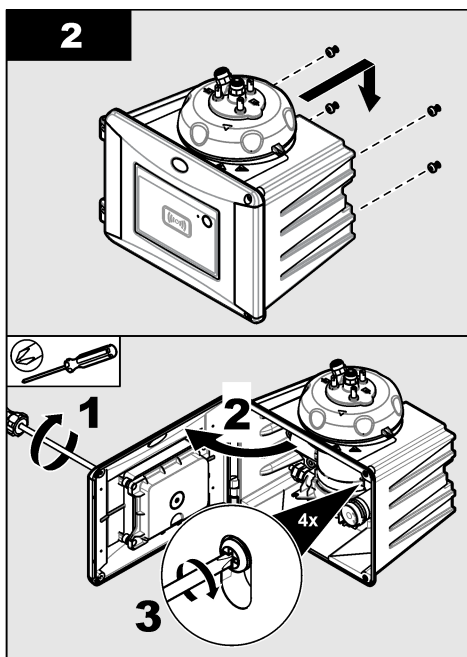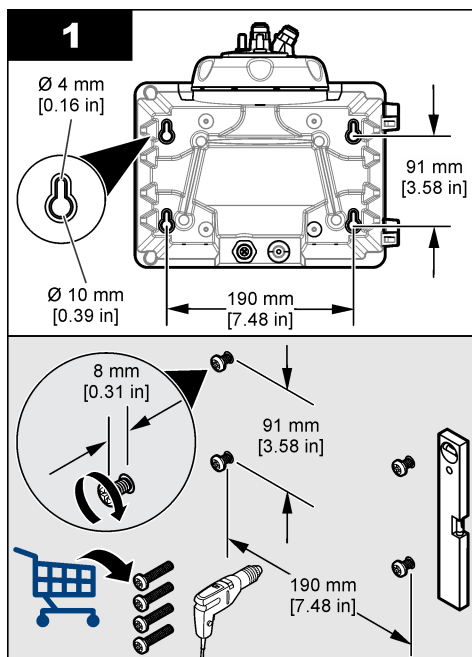



# Install the desiccant cartridge


## NOTICE

Make sure that the desiccant cartridge is installed or damage to the instrument will occur.

For initial installation, complete the steps below. For replacement, refer to the documentation supplied with the desiccant cartridge.





1. Look at the install by date on the packaging. Refer to [Figure 4](#). Do not use if the current date is past the install by date.
2. Make sure that the indicator on the new desiccant cartridge is blue. Refer to [Figure 4](#).
3. Install the new desiccant cartridge. Refer to the illustrated steps that follow.

**Figure 4 Examine the desiccant cartridge**

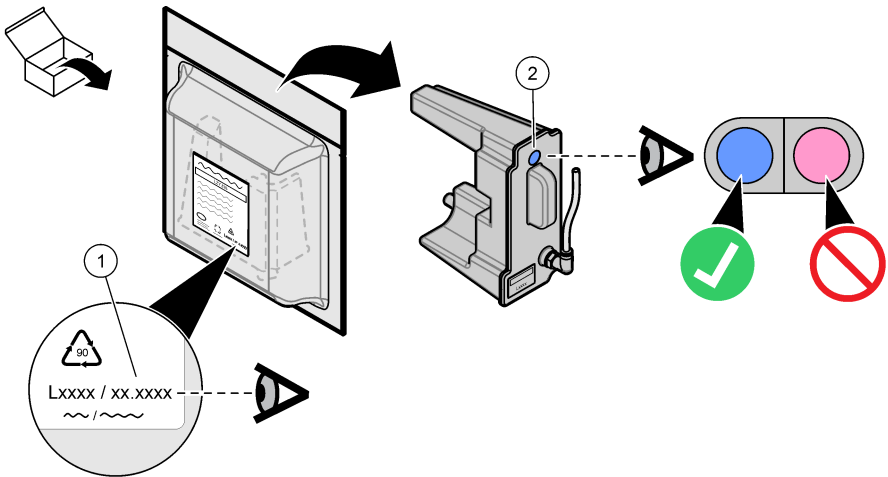

**1** Install by date (mm.yyyy = month and year)

**2** Indicator (blue = not expired, pink = expired)

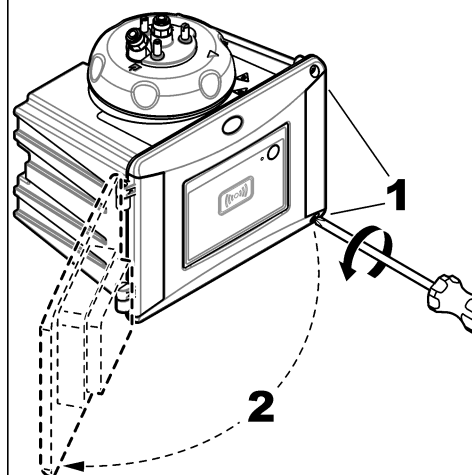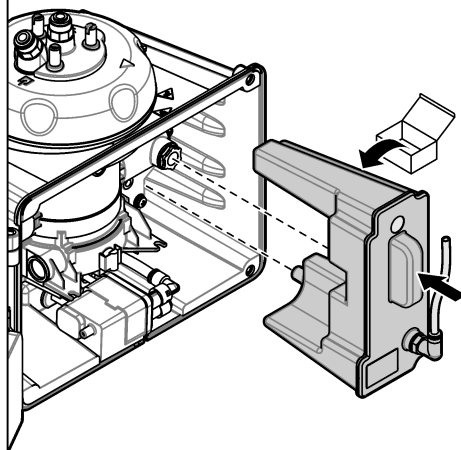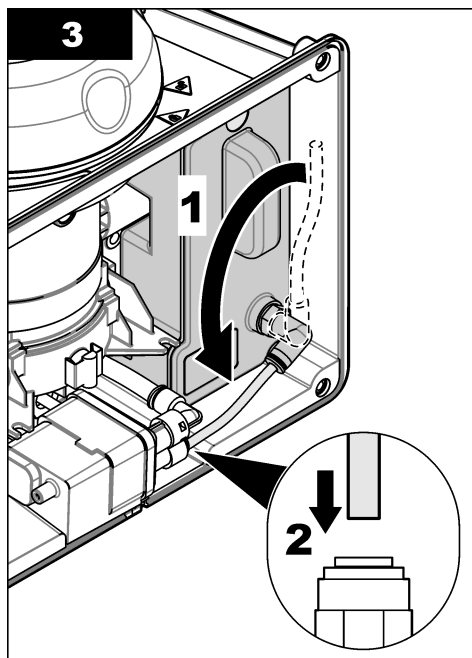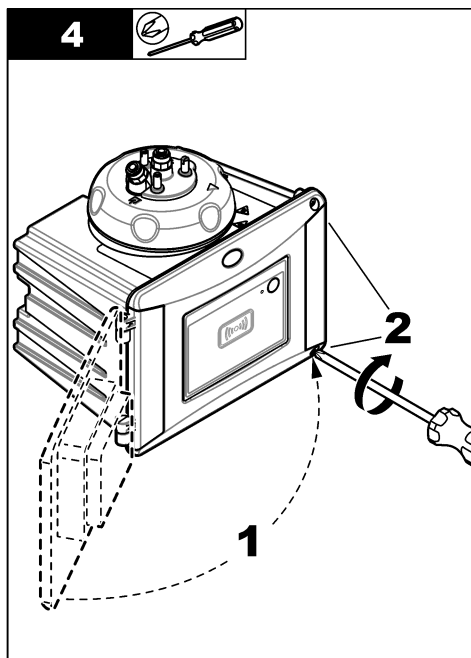**1****2****3****4**



## Replace the cleaning lid screws

If the sample temperature is 40 to 60 °C (104 to 140 °F), the cleaning lid screws will become hot. To prevent burns, replace the standard cleaning lid screws with the cleaning lid screws and washers for hot water. Refer to [Figure 1](#) on page 9.

## Install the service bracket

The service bracket holds the process head (or the optional automatic cleaning module) when it is not installed on the instrument.

Refer to [Installation overview](#) to install the service bracket the correct distance from the instrument. Refer to the illustrated steps that follow to install the service bracket.

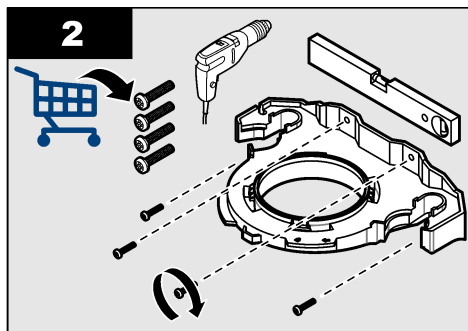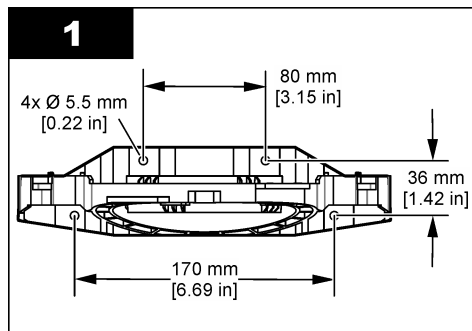

## Install the flow sensor (optional)


The optional flow sensor identifies if the sample flow is within specifications. A warning shows on the controller display and the status indicator light when a no flow, low flow or high flow warning occurs.

Install the optional flow sensor. Refer to the documentation supplied with the optional flow sensor.

## Install the automatic cleaning module (optional)

The automatic cleaning module cleans the inside of the process vial at a selected time interval. Install the optional automatic cleaning module. Refer to the documentation supplied with the automatic cleaning module.

## Connect to an SC controller

⚠ CAUTION	
	Personal injury hazard. Do not look into the vial compartment when the instrument is connected to power.




1. Install the latest software version on the SC controller before the instrument is connected to the SC controller. Get the latest software version from the manufacturer's website.

Refer to the software installation instructions supplied in the box or supplied in the software download for the SC controller.

2. Remove power to the SC controller.
3. Connect the sensor cable to the quick-connect fitting of the SC controller. Refer to [Figure 5](#). Keep the connector cap for later use.
4. Supply power to the SC controller.  
The SC controller looks for the instrument.
5. When the SC controller finds the instrument, push **enter**.  
On the main screen, the controller shows the turbidity value measured by the turbidimeter.

**Figure 5 Connect the sensor cable to the SC controller**

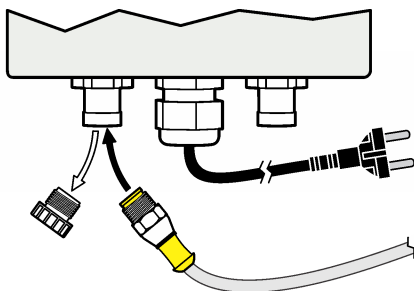

## Plumbing

### Plumb the instrument

#### ⚠ WARNING



Explosion hazard. Make sure that the drain tube is free of all obstructions. If the drain tube has a blockage or is pinched or bent, high pressure can build up in the instrument.

#### ⚠ WARNING



Personal injury hazard. The sample line contains water under high water pressure that can burn skin if hot. Qualified personnel must remove the water pressure and wear personal protective equipment during this procedure.

#### NOTICE

Do not let water get in the vial compartment or instrument damage will occur. Before the process head is installed on the instrument, make sure that there are no water leaks. Make sure that all tubing is fully seated. Make sure that the vial nut is tight.

#### NOTICE

Before the instrument is plumbed, make sure that the desiccant cartridge and vial are installed.


### Items supplied by the user:

- Flow shutoff valve
- Tubing<sup>5</sup>
- Tubing cutter



<sup>5</sup> Refer to [Specifications](#) on page 3 for the tubing requirements.





1. Measure the flow with the flow regulator fully open. Make sure that the flow is in the middle of the flow specification. Refer to [Specifications](#) on page 3.
2. Slowly close the flow regulator until the flow decreases by 20 to 30%.  
*Note: The flow regulator causes back pressure in the tubing and decreases the quantity of bubbles that form.*
3. Plumb the instrument. Refer to the illustrated steps that follow and [Figure 6](#).  
*Note: To plumb the instrument with accessories, refer to the documentation supplied with the accessories.*



**Figure 6 Plumbing overview – no accessories**

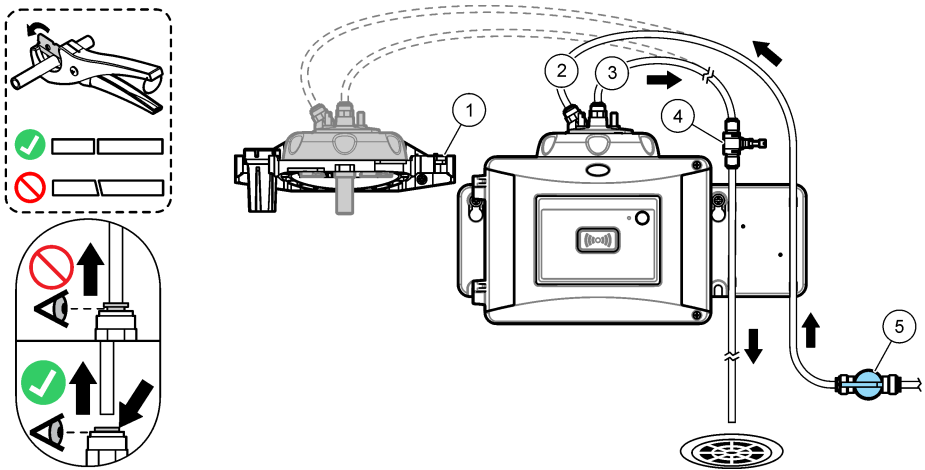

1 Service bracket	4 Flow regulator
2 Sample inlet	5 Flow shutoff valve
3 Sample outlet	

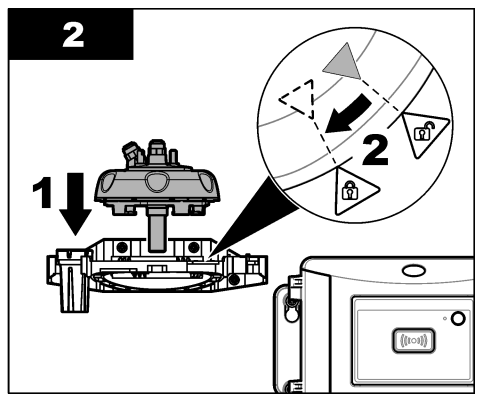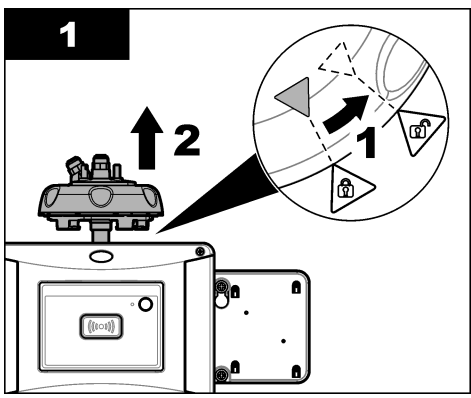

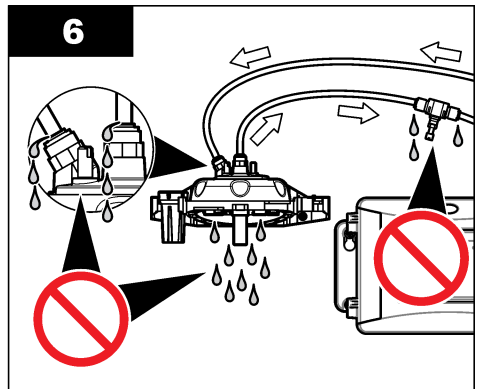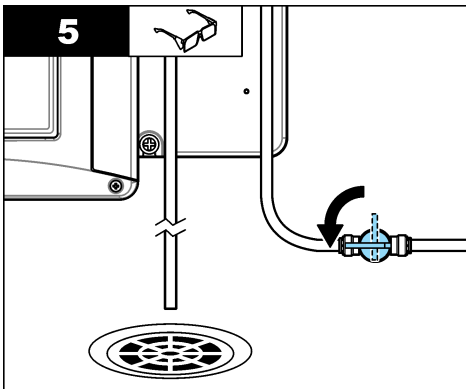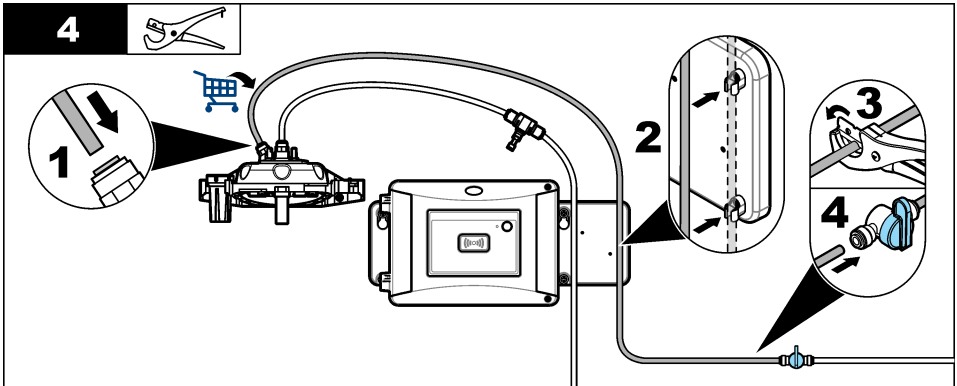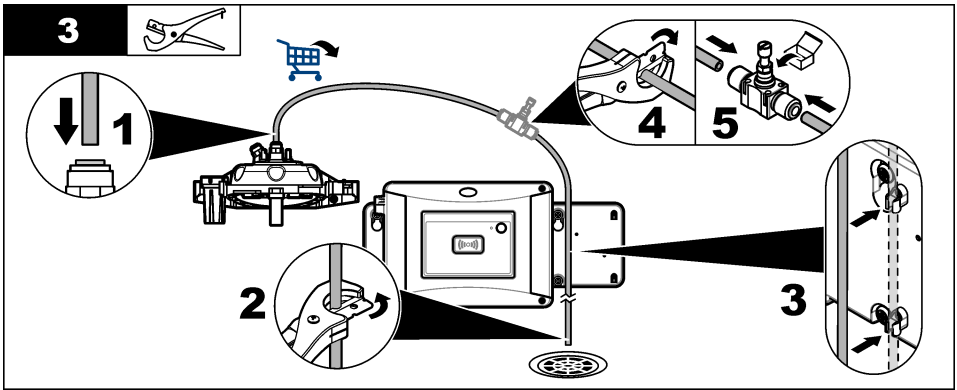

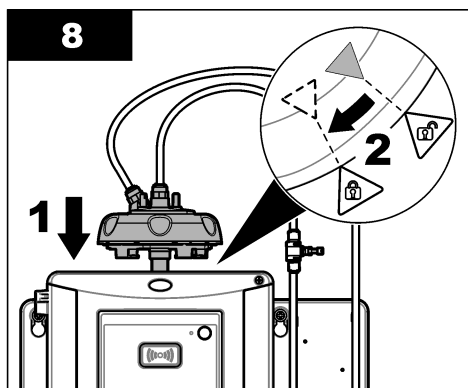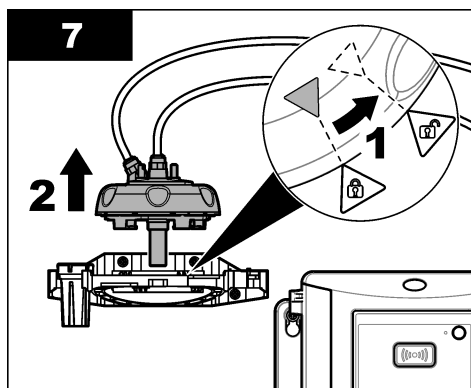

## User navigation

Refer to the controller documentation for keypad description and navigation information.

## Operation

### Configure the instrument

Select the location name, signal averaging, measurement units, resolution, bubble reject, logger interval, programmable button function and more.

1. Push **menu**.
2. Select **SENSOR SETUP>TU5x00 sc>CONFIGURE**.
3. Select an option.

Option	Description
<b>LOCATION</b>	Sets the name or location of the sample source. The name or location entered shows on the measurement screen (16 characters maximum, default: serial number).
<b>SIGNAL AVG</b>	When enabled, the turbidity reading that shows on the controller display is an average of the values measured during the time interval selected. Options: 5 to 90 seconds (default: 30 seconds). <b>Note:</b> The manufacturer recommends that the Signal Average setting be set to 30 seconds or less because of the fast response of the instrument.
<b>MEAS UNITS</b>	Selects the measurement units that show on the controller display and that are recorded to the data log. TU5300 sc options: NTU, FNU, TE/F, EBC or FTU. TU5400 sc options: NTU, mNTU, FNU, mFNU, TE/F, EBC, FTU or mFTU. Default: FNU for TU5300 sc or mFNU for TU5400 sc.
<b>RESOLUTION</b>	Selects the number of decimal places that show on the controller display. Options: 0.001 or 0.0001. TU5300 sc default: 0.001. TU5400 sc default: 0.0001.
<b>BUBBLE REJECT</b>	Sets the bubble reject to on (default) or off. When set to on, high turbidity readings caused by bubbles in the sample are not shown or saved to the data log.
<b>LOGGER INTERVAL</b>	Sets the frequency that the turbidity reading is saved to the data log. Options: 5 or 30 seconds or 1, 2, 5, 10 (default), 15 or 30 minutes.
<b>CLEANING</b>	Configures the optional automatic cleaning module settings. Refer to the documentation supplied with the automatic cleaning module to configure the CLEANING setting. This option only shows when CLEANING MODULE is set to ON.
<b>SET DEFAULTS</b>	Sets the instrument settings to the factory defaults.

Option	Description
<b>BUTTON FUNCTION</b>	<p>Sets the function of the programmable button. Refer to <a href="#">Figure 1</a> on page 9.</p> <p><b>SERVICE</b>—When the button is pushed, changes the output mode to HOLD if the output mode is currently ACTIVE and changes the output mode to ACTIVE if the output mode is currently HOLD. <b>LINK2SC</b>—When the button is pushed, makes a Link2SC job file. Refer to <a href="#">Compare measurements with Link2SC</a> on page 23. <b>OFF</b> (default) —Disables the button.</p> <p>In addition, when CLEANING MODULE is set to ON, the options that follow show.</p> <p><b>START WIPE</b>—When the button is pushed, start a wiper cleaning cycle. <b>WIPER REPLACE</b>—When the button is pushed, puts the wiper in the position for wiper replacement.</p>
<b>FLOW SENSOR</b>	<p>Enables or disables the flow signal to show on the DIAG/TEST&gt;SIGNALS screen. Enables or disables flow signal warnings and errors to occur. When the optional flow sensor is installed, set to ON (default: OFF).</p>
<b>CLEANING MODULE</b>	<p>Enables or disables the automatic cleaning module menu options. When the optional automatic cleaning module is installed, set to ON (default: OFF). When this option is set to ON, the START WIPE option shows in the main SENSOR SETUP menu.</p>
<b>AUTO-CHECK</b>	<p>Sets the time interval and sensitivity of the automatic system check. This option only shows when the instrument has the automatic system check option.</p> <p><b>CHECK INTERVAL</b>—Sets the time interval between automatic system checks. The automatic system check examines the condition of the vial. If the condition of the vial is bad, a warning message shows on the controller display. Options: OFF, 1, 2 (default), 3, 6, 12 hours or 1 day. <b>SENSITIVITY</b>—Sets the sensitivity of the automatic system check to the condition of the vial. Options: HIGH or LOW.</p>

## Show instrument information

Show instrument information and the instrument status to get diagnostic information.

1. Push **menu**.
2. Select SENSOR SETUP>TU5x00 sc>DIAG/TEST.
3. Select an option.

Option	Description
<b>SENSOR INFO</b>	Shows the sensor name, location, serial number, type (EPA or ISO), model number, software version and measurement device version.
<b>SIGNALS</b>	Shows real-time values for turbidity, flow rate <sup>6</sup> , the humidity set point and the air system humidity and temperature. Shows the vial condition (condensation and clarity) and the vial status (installed or not installed). Shows the lid type installed (calibration lid or process head).
<b>COUNTERS</b>	<p>Shows the total operational time of the instrument, remaining number of wiper cycles, date the vial was installed/replaced, date the vial was cleaned, date of calibration, date of verification, operational time of the desiccant, remaining desiccant life, operational time of the air pump and date factory service was done.</p> <p><b>Note:</b> The counters are reset when menu-guided maintenance is done. Refer to the MAINTENANCE option that follows.</p>
<b>MAINTENANCE</b>	<p>Starts menu-guided maintenance to replace or clean the vial, replace the wiper or replace the desiccant cartridge.</p> <p><b>START WIPE</b>—Starts a wiper cleaning when the optional automatic cleaning module is installed. <b>OUTPUT MODE</b>—Selects the output behaviour during maintenance (default: HOLD). <b>FACTORY SERVICE</b>—For service use only.</p>

<sup>6</sup> A value less than 0.1 shows if the optional flow sensor is not installed.



## Compare process and laboratory measurements

Compare process and laboratory measurements with RFID or Link2SC. Make sure that the process and lab instrument are calibrated with the same number of calibration points and with the same standards.

### Collect a grab sample

Collect a grab sample (100 mL minimum) from the sample outlet tubing of the process instrument. Put the cap on the sample bottle. Analyze the grab sample immediately with the laboratory instrument to prevent settling, bacteria growth and temperature changes.

### Compare measurements with RFID

When the process instrument and laboratory instrument have the optional RFID module, compare process and laboratory measurements with RFID.

#### Items to collect:

- TU5300 sc or TU5400 sc with the optional RFID module
  - TU5200 with the optional RFID module
  - TU5200 sample vials
  - Sample bottle with a sample RFID sticker
  - Operator RFID tag (optional)
1. At the process instrument, put the operator RFID tag (if available) near the RFID module. Refer to [Figure 1](#) on page 9 for the location of the RFID module.
  2. Put a sample RFID sticker on the sample bottle.
  3. Collect a grab sample. Refer to [Collect a grab sample](#) on page 23.
  4. Put the RFID sticker that is on the sample bottle near the RFID module. Refer to [Figure 1](#) on page 9 for the location of the RFID module.  
The instrument gives two beeps. The status indicator light changes to blue.  
The turbidity reading, operator ID (if available), location of the process instrument and the date and time are recorded on the RFID sticker.
  5. Move the sample bottle to the laboratory instrument.
  6. At the laboratory instrument, put the operator RFID tag (if available) near the RFID module to log in.
  7. Put the RFID sticker that is on the sample bottle near the RFID module.  
The instrument gives two beeps. The turbidity reading from the process instrument shows on the display.
  8. Measure the turbidity of the grab sample with the laboratory instrument. Refer to the TU5200 documentation.  
If the difference between the process and laboratory measurements is not more than the selected acceptance range, "Measurement values match." shows on the display. Refer to the TU5200 documentation to select the acceptance range.  
If "Measurement values do not match." shows on the display, click the link to show the troubleshooting steps.
  9. To show the compare log, push **Options>Compare Log**. Refer to the TU5200 documentation for more options.
  10. To send the verification data to external devices that are connected to the instrument, push **Options>Send Data**. Refer to the TU5200 documentation for more options.

### Compare measurements with Link2SC

When the process instrument and laboratory instrument do not have the optional RFID module, compare the process and laboratory measurements with Link2SC.

#### Items to collect:

- TU5300 sc or TU5400 sc

- TU5200
  - TU5200 sample vials
  - SD card<sup>7</sup> (or a LAN connection at the SC controller<sup>8</sup> and the laboratory instrument<sup>9</sup>)
  - USB adapter for the SD card (if used)
1. If the SC controller and laboratory instrument do not have a LAN connection, install the SD card in the SC controller. Refer to the SC controller documentation to install the SD card.
  2. At the SC controller, make a Link2SC job file as follows:
    - a. Push **menu**.
    - b. Select **LINK2SC>CREATE A NEW JOB>TU5x00 sc**.  
 The SC controller makes a Link2SC job file. The turbidity reading, operator ID (if available), location of the process instrument and the date and time are recorded to the job file.  
 In addition, the temperature, calibration settings, bubble reject setting, vial clarity and desiccant cartridge life are recorded to the Link2SC job file.
  3. Push **OK**, then **YES**.
  4. Select **JOB>LAB**.  
 The Link2SC job file is saved to the SD card (if available) or sent to the laboratory instrument (when the SC controller and laboratory instrument have a LAN connection).  
 To see the Link2SC job files on the SD card, select **JOBS FROM CARD**.
  5. If the SC controller and laboratory instrument do not have a LAN connection, complete the steps that follow.
    - a. Remove the SD card from the SC controller.
    - b. At the laboratory instrument, put the SD card in the USB adapter. Then put the USB adapter in a USB port type A on the laboratory instrument.
  6. At the laboratory instrument, push the **LINK2SC** to show the job list.
  7. Select the latest Link2SC job file.  
 The turbidity measurement from the process instrument shows on the right side of the display.
  8. Measure the turbidity of the grab sample with the laboratory instrument. Refer to the TU5200 documentation.  
 If the difference between the process and laboratory measurements is not more than the selected acceptance range, "Measurement values match." shows on the display. Refer to [Configure the Link2SC settings](#) on page 25 to select the acceptance range.  
 If "Measurement values do not match." shows on the display, click the link to show the troubleshooting steps.
  9. To show the compare log, push **Options>Compare Log**. Refer to the TU5200 documentation for more options.
  10. To send the verification data to external devices that are connected to the instrument, push **Options>Send Data**. Refer to the TU5200 documentation for more options.

<sup>7</sup> Refer to the SC controller documentation for the SD card requirements.

<sup>8</sup> Refer to the SC controller documentation to set up a LAN connection at the SC controller.

<sup>9</sup> Refer to the TU5200 documentation to set up a LAN connection at the laboratory instrument.

## Configure the Link2SC settings

Select the acceptance range permitted when process and laboratory measurements are compared with Link2SC.

1. Push **menu**.
2. Select **SENSOR SETUP>TU5x00 sc>LINK2SC**.
3. Select an option.

Option	Description
<b>ACCEPT. UNIT</b>	Sets the units used to compare the process and laboratory measurements. Options: %, NTU or LAB. Select LAB when the acceptance range is supplied by the laboratory instrument.
<b>ACCEPT. RANGE</b>	Sets the maximum difference permitted between the process and laboratory measurements. Options: 1 to 50% (default: 10%). This option only shows when ACCEPT. UNIT is set to % or NTU.

## Calibration

### ⚠ WARNING



Chemical exposure hazard. Obey laboratory safety procedures and wear all of the personal protective equipment appropriate to the chemicals that are handled. Refer to the current safety data sheets (MSDS/SDS) for safety protocols.

The instrument is factory calibrated and the laser light source is stable. The manufacturer recommends that a calibration verification be done periodically to make sure that the system operates as intended. The manufacturer recommends calibration as local regulations require and after repairs or comprehensive maintenance work.

The optional calibration lid and a vial(s) with a StablCal standard or Formazin standard are necessary to calibrate the instrument. Refer to the documentation supplied with the calibration lid to calibrate the instrument and configure the calibration settings.

## Verification

The optional calibration lid is necessary to do a calibration verification. Refer to the documentation supplied with the optional calibration lid to configure the verification settings and do a verification with the calibration lid.

## Show the calibration or verification history

To show the historical data for the last four calibrations, push menu and select **SENSOR SETUP>TU5x00 sc>CALIBRATION>CAL LOG**.

To show the historical data for the last four verifications, push menu and select **SENSOR SETUP>TU5x00 sc>VERIFICATION>VERIF LOG**.

## Maintenance

### ⚠ WARNING



Burn hazard. Obey safe handling protocols during contact with hot liquids.

## ⚠ CAUTION



Multiple hazards. Only qualified personnel must conduct the tasks described in this section of the document.

## ⚠ CAUTION



Personal injury hazard. Never remove covers from the instrument. This is a laser-based instrument and the user risks injury if exposed to the laser.

## ⚠ CAUTION



Personal injury hazard. Glass components can break. Handle with care to prevent cuts.

## NOTICE

Do not disassemble the instrument for maintenance. If the internal components must be cleaned or repaired, contact the manufacturer.

## NOTICE

Stop the sample flow to the instrument and let the instrument become cool before maintenance is done.

To set the output behavior during maintenance, push **menu** and select SENSOR SETUP>TU5x00 sc>DIAG/TEST>MAINTENANCE>OUTPUT MODE.

## Maintenance schedule

Table 3 shows the recommended schedule of maintenance tasks. Facility requirements and operating conditions may increase the frequency of some tasks.

**Table 3 Maintenance schedule**

Task	1 to 3 months	1 to 2 years	As necessary
<a href="#">Clean the vial</a> on page 27 <i>Note: The cleaning interval is dependent on the water quality.</i>	X		
<a href="#">Clean the vial compartment</a> on page 28			X
<a href="#">Replace the vial</a> on page 29		X	
<a href="#">Replace the desiccant cartridge</a> on page 31 <i>Note: The replacement interval is dependent on the ambient humidity, ambient temperature and sample temperature.</i>		X <sup>10</sup>	
<a href="#">Replace the tubing</a> on page 31			X

## Clean spills

## ⚠ CAUTION



Chemical exposure hazard. Dispose of chemicals and wastes in accordance with local, regional and national regulations.



1. Obey all facility safety protocols for spill control.
2. Discard the waste according to applicable regulations.

<sup>10</sup> Two years or as identified by instrument notification.

# Clean the instrument

Clean the exterior of the instrument with a moist cloth and a mild soap solution and then wipe the instrument dry as necessary.

# Clean the vial




**⚠ WARNING**  


Chemical exposure hazard. Obey laboratory safety procedures and wear all of the personal protective equipment appropriate to the chemicals that are handled. Refer to the current safety data sheets (MSDS/SDS) for safety protocols.


When the turbidity reading shows that there is contamination in the process vial or "VIAL CLARITY" shows on the controller display, clean the vial.


1. Push **menu**.
2. Select **SENSOR SETUP>TU5x00 sc>DIAG/TEST>MAINTENANCE>VIAL CLEANING**.
3. Complete the steps that show on the controller display. The date the vial was cleaned is automatically saved after the last screen shows.
4. If the optional automatic cleaning module is installed, push **menu** and select **SETUP>TU5x00 sc>START WIPE** to start the automatic cleaning process.
5. If the optional automatic cleaning module is not installed, clean the vial with the optional vial wiper if available. Refer to [Clean the vial with the optional wiper](#) on page 28.
6. If the turbidity readings do not go back to the original values, do the illustrated steps that follow to clean the vial.



**Note:** Hold the output values of the SC controller as necessary before the illustrated steps are done. Refer to the SC controller documentation to hold the outputs.

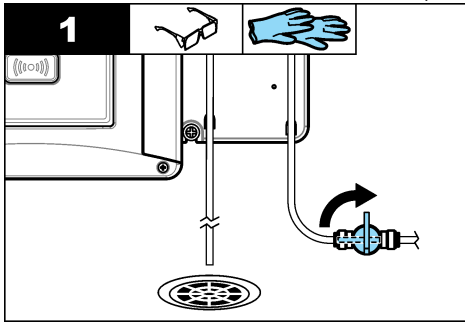**1**

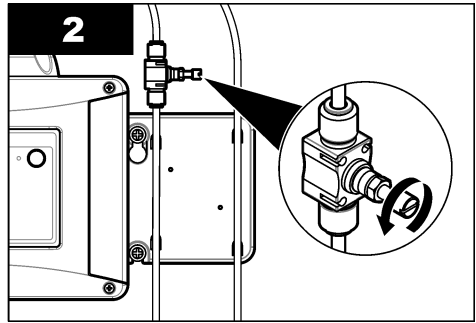**2**

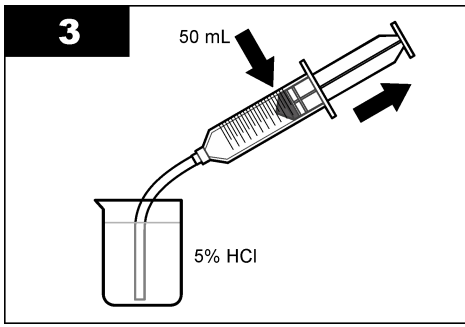**3**

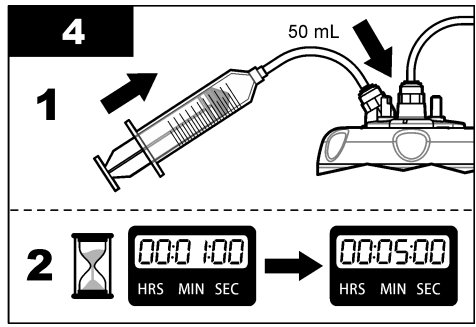**4**



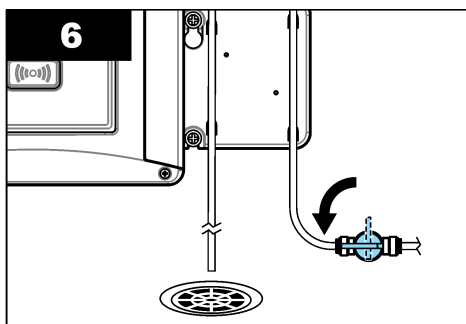
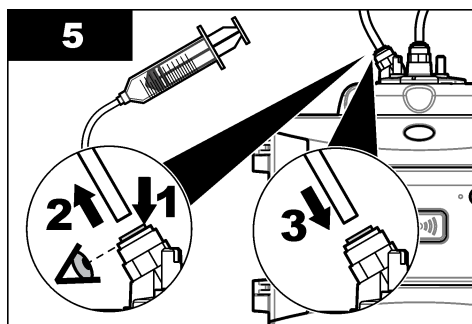


## Clean the vial with the optional wiper

### NOTICE

Carefully remove most of the water in the vial. Carefully put the vial wiper into the process vial so that no water spills out.

Clean the process vial with the optional vial wiper as shown in the illustrated steps that follow.

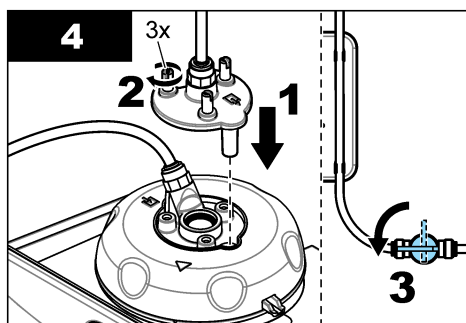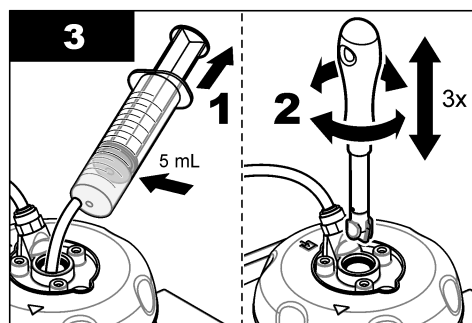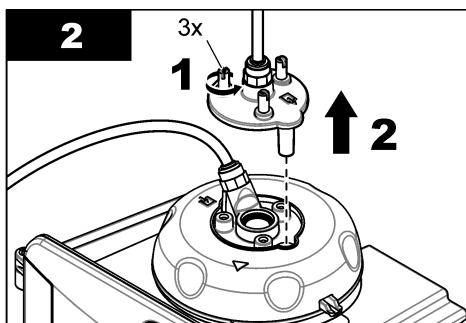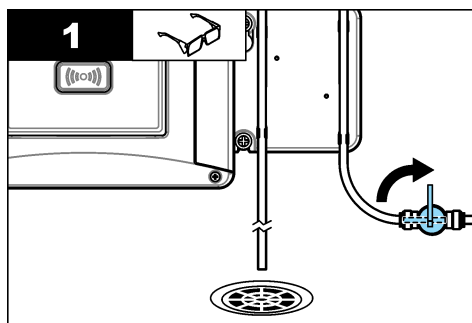

## Clean the vial compartment

Clean the vial compartment only when the compartment has contamination. Make sure that the tool to clean the vial compartment has a soft surface and does not damage the instrument. [Table 4](#) shows the options on how to clean the vial compartment.

**Table 4 Cleaning options**

Contaminant	Options
Dust	Vial compartment wiper, micro fiber cloth, lint-free cloth
Liquid, oil	Cloth, water and cleaning agent

## Replace the vial

### NOTICE

Keep water out of the vial compartment or instrument damage will occur. Before the automatic cleaning module is installed on the instrument, make sure that there are no water leaks. Make sure that all tubing is fully seated. Make sure that the vial nut is tight.

### NOTICE

Hold the automatic cleaning module vertically when it is installed on the instrument or the vial can break. If the vial breaks, water will get in the vial compartment and instrument damage will occur.


### NOTICE









Do not touch or scratch the glass of the process vial. Contamination or scratches on the glass can cause measurement errors.

**Note:** Make sure that no particles fall into the vial compartment.


1. Push **menu**.
2. Select **SENSOR SETUP>DIAG/TEST>MAINTENANCE>VIAL REPLACEMENT**.
3. Complete the steps that show on the controller display. The date the vial was replaced is automatically saved after the last screen shows.

Refer to the illustrated steps that follow to replace the vial. To protect the new vial from contamination, use the vial replacement tool to install the vial.

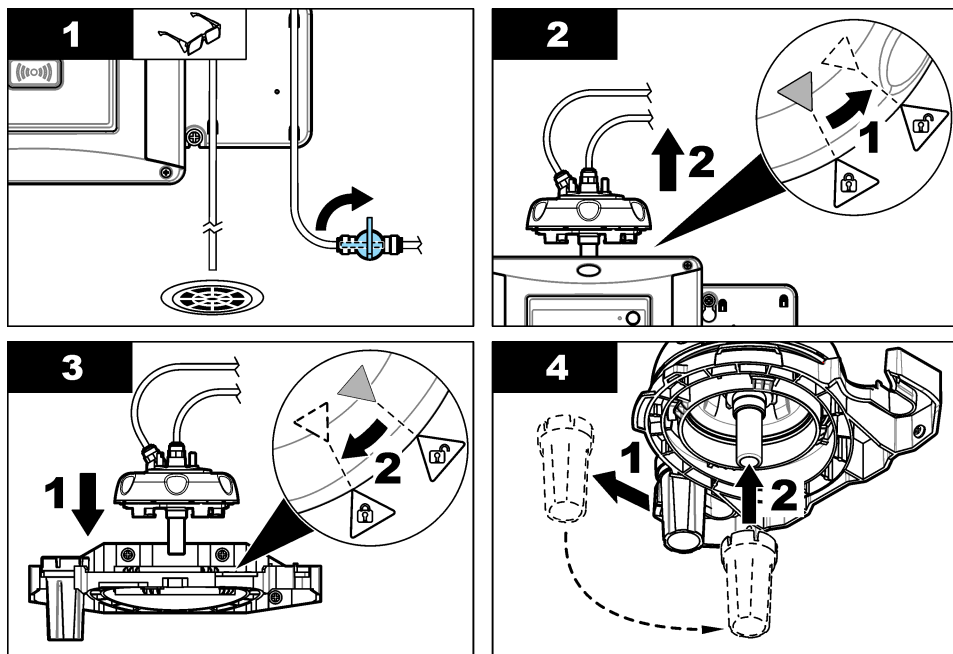

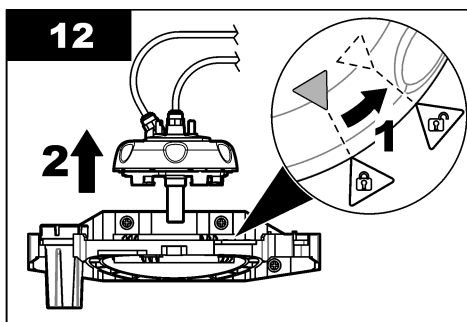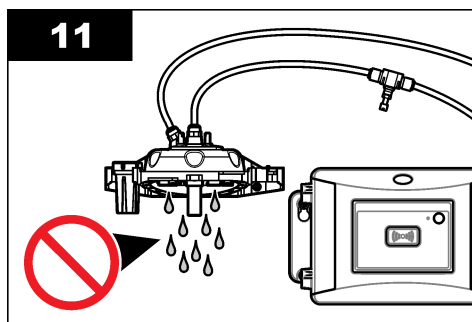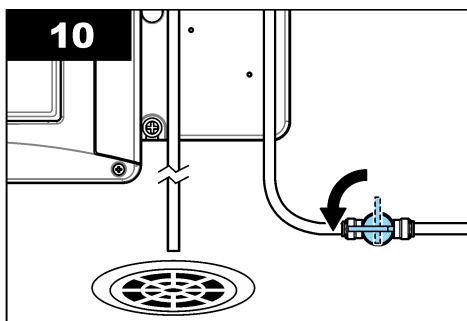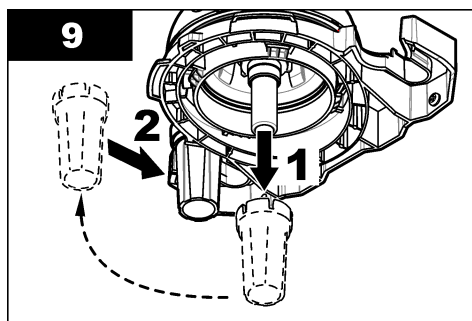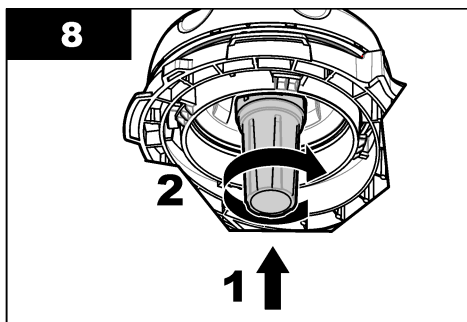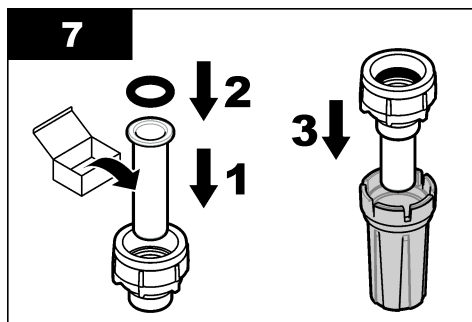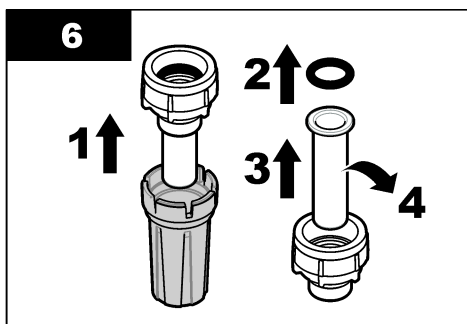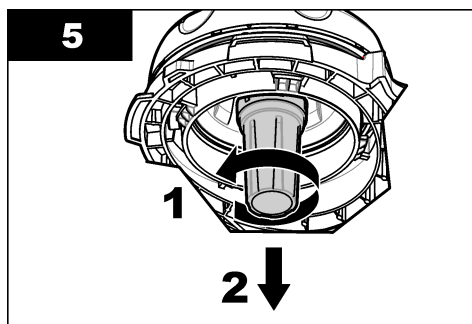



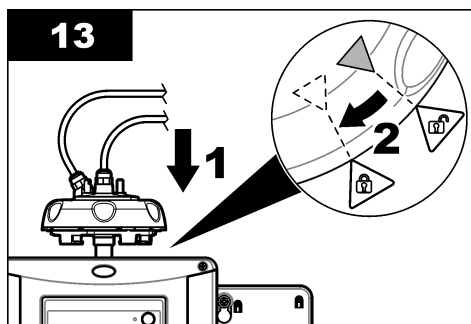

## Replace the desiccant cartridge

The controller display will show when a desiccant cartridge replacement is due. Refer to the documentation included in the desiccant cartridge bag to replace the desiccant cartridge.

## Replace the tubing

Replace the tubing when the tubing has a blockage or has damage.

Turn the flow shutoff valve to stop flow to the instrument. Then refer to [Plumb the instrument](#) on page 18 to replace the tubing.

## Troubleshooting

### Reminders

Reminders show on the controller display. To see all of the reminders, push **menu** then select **DIAGNOSTICS>TU5x00 sc>REMINDER**.

Message	Description	Solution
DRYER RANGE	The desiccant cartridge capacity is low.	Replace the desiccant cartridge. Refer to the documentation supplied with the desiccant cartridge.
PERFORM CAL	A calibration is due.	Do a calibration. Refer to <a href="#">Calibration</a> on page 25.
PERFORM VER	A verification is due.	Do a verification. Refer to <a href="#">Verification</a> on page 25.
WIPER REPLACE	A wiper replacement is due in the automatic cleaning module.	Replace the wiper in the automatic cleaning module. Refer to the documentation supplied with the automatic cleaning module to replace the wiper.

### Warnings

Warnings show on the controller display. To see all of the active warnings, push **menu** then select **DIAGNOSTICS>TU5x00 sc>WARNING LIST**.

Warning	Description	Solution
DRYER	The drying circuit has a malfunction.	Contact technical support. Measurements with limited validity are still available.
CLEANING MODULE	The automatic cleaning module does not operate correctly.	Make sure that the wiper head is installed correctly and the wiper arm can move up and down.
DESICCANT OLD	The desiccant cartridge is more than 2 years old.	Replace the desiccant cartridge. Refer to the documentation supplied with the desiccant cartridge.

Warning	Description	Solution
DRYER EXHAUS'D	The desiccant cartridge life is zero.	Replace the desiccant cartridge. Refer to the documentation supplied with the desiccant cartridge.
HIGH FLOW	The flow rate is higher than the limit (more than 1250 mL/min).	Adjust the flow regulator as necessary. Make sure that the flow regulator does not have a malfunction.
HUM PCB SC	There is humidity on the interior electronics of the instrument.	Contact technical support. Measurements with limited validity are still available.
LASER-TEMP HIGH	The laser temperature is higher than the limit.	Decrease the environmental temperature of the instrument.
LASER-TEMP SENS	The laser temperature sensor has a malfunction.	Contact technical support. Measurements with limited validity are still available.
LOW FLOW	The flow rate is lower than the limit (less than 75 mL/min).	Examine the tubing for blockages that decrease the flow rate. Remove the blockages. Adjust the flow regulator as necessary. Make sure that the flow regulator does not have a malfunction.
NO FLOW	The flow rate is less than 10 mL/min.	Examine the tubing for blockages stop the flow. Remove the blockages.
NOT DRYING	The instrument cannot regulate the internal humidity.	Replace the desiccant cartridge. Refer to <a href="#">Replace the desiccant cartridge</a> on page 31. If the error continues, contact technical support. Measurements with limited validity are still available.
PUMP	The air pump for the drying circuit has a malfunction.	Contact technical support. Measurements with limited validity are still available.
SENS.DRY: FUNC	The air system of the drying system has a malfunction.	Contact technical support. Measurements with limited validity are still available.
SENS.DRY: HUM	The humidity value from the air sensor is not correct.	Contact technical support. Measurements with limited validity are still available.
SENS.DRY: TEMP	The temperature value from the air sensor is not correct.	Contact technical support. Measurements with limited validity are still available.
TURB TOO HIGH	The turbidity reading is not within the calibration range.	Make sure that the calibration range selected is applicable to the turbidity value of the sample.
WIPER REPLACE	A wiper replacement is due in the automatic cleaning module.	Replace the wiper in the automatic cleaning module. Refer to the documentation supplied with the automatic cleaning module to replace the wiper.
VIAL CLARITY	The vial or vial compartment is dirty.	Clean or dry the vial and the vial compartment.

## Errors

Errors show on the controller display. To see all of the active errors, push **menu** then select **DIAGNOSTICS>TU5x00 sc>ERROR LIST**.

Error	Description	Solution
AU COMM	An internal communication error occurred.	Set the controller power to off and then on again. Contact technical support.
AUTOCHK. NO FUNC	The automatic system check does not complete.	Contact technical support.
CLEANING MODULE	The automatic cleaning module has a malfunction.	Contact technical support.

Error	Description	Solution
EE RSRVD ERR	There is a problem with the internal memory.	Contact technical support.
FLASH FAIL	The internal calibration memory is corrupted.	Contact technical support.
HUMIDITY PCB	There is humidity or water in the instrument.	Contact technical support.
LASER TOO LOW	The laser has a malfunction.	Contact technical support.
MEAS ELECTRONIC	There is a measurement error. There is a problem in the electronics unit.	Contact technical support.
PROC HEAD OPEN	The process head is in the open position or the process head detector has a malfunction.	Turn the process head to the closed position.
TURB TOO HIGH	The turbidity reading is higher than the measurement range of the instrument (1000 FNU maximum).	Make sure that the turbidity value of the sample is within the measurement range of the instrument.
VIAL PRESENT	There is no vial in the vial compartment.	Install a vial in the vial compartment.
VIAL CLARITY	The vial or vial compartment is dirty.	Clean or dry the vial and the vial compartment.
WATER INGRESS	There is water in the instrument.	Immediately stop flow to the instrument. Disconnect the sensor cable. Contact technical support.  The desiccant cartridge can become hot. Only touch and remove the desiccant cartridge when it is at room temperature.

## Replacement parts and accessories

⚠ WARNING	
	Personal injury hazard. Use of non-approved parts may cause personal injury, damage to the instrument or equipment malfunction. The replacement parts in this section are approved by the manufacturer.

**Note:** Product and Article numbers may vary for some selling regions. Contact the appropriate distributor or refer to the company website for contact information.

### Recommended standards

Description	Quantity	Item no.
Verification standard, < 0.1 NTU, glass verification rod (solid secondary standard)	each	LZY901
StabiCal 800 mNTU Standard	1 L	2788453
StabiCal 10 NTU Standard	500 mL	2659949
StabiCal 20 NTU Standard	1 L	2660153
StabiCal 20-NTU sealed vial with RFID	each	LZY837
StabiCal 20-NTU sealed vial without RFID	each	LZY899
StabiCal kit, sealed vials with RFID, includes: 10, 20 and 600 NTU vials	each	LZY835
StabiCal kit, sealed vials without RFID, includes: 10, 20 and 600 NTU vials	each	LZY898

## Replacement parts

Description	Quantity	Item no.
Cleaning lid screws and washers, hot water, includes: Cleaning lid screws (3x) and washers (3x)	3	LZY905
Desiccant cartridge	each	LZY876
Mounting set, includes: Mounting screws (4x), tubing clip screws (2x) and tubing clips (2x)	each	LZY870
Nut, process vial	each	LZY917
Seal, automatic cleaning module	each	LZY914
Seal, process head	each	LZV969
Seal, process vial	each	LZY918
Service bracket	each	LZY873
Flow regulator kit, includes: flow regulator and tube ¼-in. OD × 0.13 m (5.11 in.)	each	LZY963
Vial with no seal, process	each	LZY834
Vial replacement tool	each	LZY906
Wall mount bracket kit, includes: Wall mount bracket (two tubing clips on bracket), mounting screws (4x), tubing clips (2x) and tubing clip screws (2x)	each	LZY871

## Accessories

Description	Quantity	Item no.
Automatic cleaning module	each	LQV159.99.00002
Bubble trap	each	LZY828.99.00002
Calibration lid	each	LZY904.98.00002
Extension cable, sensor cable, 1 m (3.3 ft)	each	6122400
Extension cable, sensor cable, 5 m (16.40 ft)	each	LZX848
Extension cable, sensor cable, 10 m (32.81 ft)	each	LZX849
Flow sensor kit, includes: flow sensor, flow sensor cap, mounting screws and 1 m (3.3 ft) of ¼ in. OD tubing	each	LQV160.99.00002
Maintenance kit for post-filter applications, includes: Case, calibration lid, micro fiber cloth, 20 NTU StablCal sealed vial, verification glass rod, vial wiper, vial compartment wiper, mobile service bracket, glass verification rod ( ≤ 0.1 NTU) and vial replacement tool	each	LZY907
Micro fiber cloth, vial cleaning	each	LZY945
Tubing adapter, ¼ in. to 6 mm	each	LZY954
RFID tags, operator	2/pkg	LZQ066
RFID stickers, black <sup>11</sup>	3/pkg	LZQ067
Tubing, bubble trap to TU5x00 sc, ¼ in. OD	1 m	LZQ134

<sup>11</sup> Other colors are available.

**Accessories (continued)**

Description	Quantity	Item no.
Tubing set, ULTRATURB replacement	each	LZY912
Tubing, inlet of bubble trap, 3/8 in. OD	4 m	LZY947
Tubing, inlet and outlet of TU5x00 sc, ¼ in. OD	4 m	LZY911
Vial wiper	each	LZY903
Vial compartment wiper	each	LZY910





**HACH COMPANY World Headquarters**

P.O. Box 389, Loveland, CO 80539-0389 U.S.A.

Tel. (970) 669-3050

(800) 227-4224 (U.S.A. only)

Fax (970) 669-2932

orders@hach.com

www.hach.com

**HACH LANGE GMBH**

Willstätterstraße 11

D-40549 Düsseldorf, Germany

Tel. +49 (0) 2 11 52 88-320

Fax +49 (0) 2 11 52 88-210

info-de@hach.com

www.de.hach.com

**HACH LANGE Sàrl**

6, route de Compois

1222 Vézenaz

SWITZERLAND

Tel. +41 22 594 6400

Fax +41 22 594 6499