


Palintest

Water Analysis Technologies

Distributed By:



camlab



SOIL KITS

POOL AND SPA WASTEWATER DRINKINGWATER PROCESS WATER **SOIL**

About us

Palintest is a leading company in the design and manufacture of water analysis technologies, supplying a comprehensive range of precision instruments for multidisciplinary analysis.

A global company with a local approach

• USA • UK • China • Australia



Application areas



Drinking water

Test kits for water treatment and supply



Soil and irrigation

Test kits for optimising crop yields



Pool and spa


Kits for commercial and residential sectors



Process industries


Test kits for industrial processes

Product range

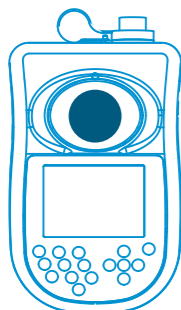

From multiparameter photometers to visual test kits. Palintest has a wide range of solutions for every application.

Water testing library

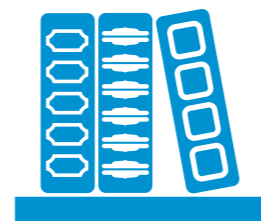

Our online library contains research and insight surrounding our products and the applications they are used in.

Soil Nutrient Testing

Soil is a precious but non-renewable resource. It sustains life across the globe by providing the basis for healthy food production, fuel, fibres for clothing and medicinal products. Protecting and managing soil health requires a focus on soil macronutrients and micronutrients. Testing ensures soil is capable of supporting a growing population whilst protecting the environment.

Key benefits of Palintest soil kits:

Simplified soil testing methods

Validated against standard laboratory approaches.

Suitability for field or laboratory use

Provided in robust field cases for in field soil testing. Our test kits offer an economical and simple test solution which is equally suitable for in field and laboratory testing.

Data management and technical support

Store, share, manage and map the soil analysis data produced using the AquaPal app and secure Palintest Portal.

Photometer feature key



Tablet icon

This instrument is compatible with tablet reagents.



Tubetest icon

This instrument is compatible with liquid tubetest reagents.



USB icon

This instrument includes a data transfer function via USB.



Bluetooth icon

This instrument includes a data transfer function via Bluetooth.

Soiltest 10Bluetooth

Equipped with Bluetooth connectivity, the Soiltest 10Bluetooth® delivers accurate soil nutrient testing in a robust and portable photometer.

Choose Your Soil Kit





Parameter	SK 100 Soil pH/Lime Requirement Kit	SK 200 Soil Fertility Kit	SK 300 Soil Management Kit	SKW400 Professional Soil Management Kit	SKW500 Complete Soil Kit
Soil pH	•	•	•	•	•
Lime Requirement	•	•	•	•	•
Nitrate Nitrogen (N)		•	•	•	•
Phosphate (P)		•	•	•	•
Potassium (K)		•	•	•	•
Magnesium (Mg)			•	•	•
Calcium (Ca)			•	•	•
Conductivity			•	•	•
Salinity				•	•
Aluminium (Al)					•
Ammonia Nitrogen (N)					•
Chloride (Cl)					•
Copper (Cu)					•
Iron (Fe)					•
Manganese (Mn)					•
Sulfur (S)					•
Test Equipment					
Soiltest 10 Bluetooth				•	•
Nitrogen/Phosphate/ Magnesium (N/P/Mg) Tester Block		•	•		
Double Tube Assembly Potassium (K)		•	•		
Multiparameter Pocket Sensor				•	•
Soil pH Tester Block	•	•	•		
Pocket Conductivity Sensor			•		
Case					
	Hard case with protective foam inner	Soft shoulder case with protective foam inner	Soft shoulder case plus hard case, both with protective foam inner	IP67 Waterproof case with integral work surface	IP67 Waterproof case with integral work surface

The Soiltest 10 includes:

- Mains or battery powered and completely waterproof – ideal for portable use during field soil nutrient studies, or permanently based in the laboratory
- Complete range of soil test parameters – access the 10 tests from the keypad and add up to 30 more methods as required
- Results can be downloaded via USB or via Bluetooth for use with the Palintest AquaPal App.

The Soiltest 10 Bluetooth is included in both the SKW 400 Professional Soil Management Kit and the SKW 500 Complete Soil Kit.

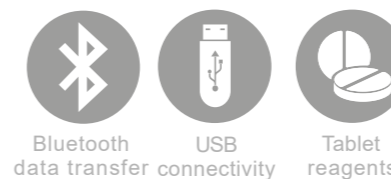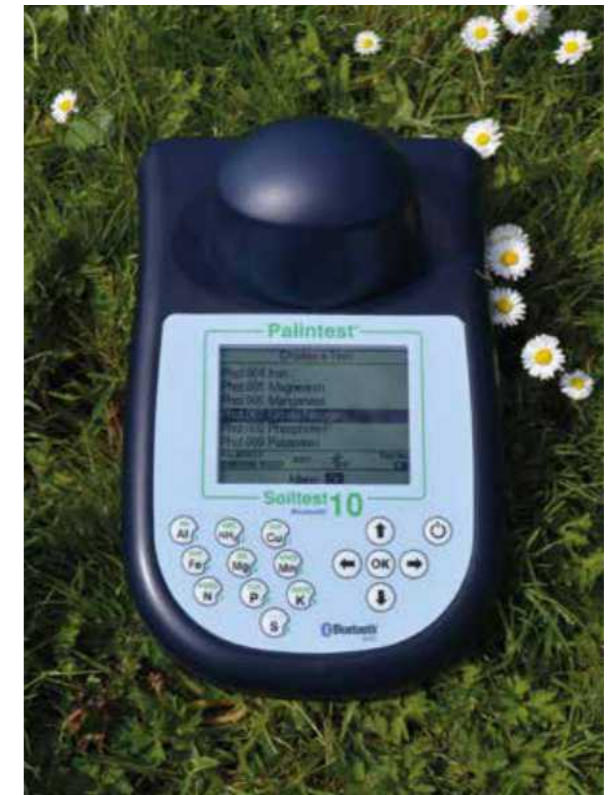

Technical Specification

Instrument Type	Dual light source colorimeter offering direct reading of pre-programmed test calibrations, Absorbance and Transmittance.
Peak Wavelengths:	450nm, 500nm, 550nm, 570nm, 600nm, 650nm
Accuracy:	±1.0% T
Display:	320 x 240 pixel LCD with backlight and contrast adjustment for all light conditions
User Interface:	On-screen prompts available in English, French, Spanish, German, Italian, Turkish and Mandarin (Chinese).
Size (W x L x H) and Weight	150 x 250 x 70mm, 975 g
IP Rating:	IP67
Power Supply	3 x 1.5v 'AA' batteries, mains power delivered via USB port
Connectivity	Palintest Bluetooth (4.0) profile and USB for data download, software upload
Memory Capacity:	Up to 500 data sets. Each data set includes date, time, Sample ID, Operator ID, method number, method name, result, units

SKW 500 Complete Soil Kit

Combining the accuracy of the Soiltest 10 photometer with the simplicity of Palintest soil test methods. The SKW 500 provides agronomists, soil scientists and farming professionals alike with a robust portable soil laboratory for macronutrients and micronutrients.



The SKW 500 includes:

- Simple yet reliable test protocols for macronutrients (soil pH, N/P/K), micronutrients and trace minerals including sulfur, manganese and magnesium
- Includes the waterproof and Bluetooth-enabled Soiltest 10 photometer plus the Multiparameter Pocket Sensor for laboratory accuracy in the field
- Provided in an IP67 durable field case including all reagents and apparatus to begin soil testing immediately

Packed with 30 years of experience of simplifying soil nutrient testing, the SKW 500 Complete Professional Soil Kit brings the soil laboratory to the field.



Bluetooth data transfer



USB connectivity



Tablet reagents



Tubetest reagents

Ordering Information

SKW 500 Complete Soil Kit

Technical Specification

Size (W x L x H) 555 x 428 x 211mm

Weight 10.5 kg



Soil tests included:

Parameter	Range*
Soil pH	0 - 14
Lime Requirement	0 - 34 tonne/ha
Conductivity	0 - 19.9mS/cm
Salinity	0 - 1%
Nitrate Nitrogen (N)	0 - 25 mg/L N
Phosphate (P)	0 - 150mg/L P
Potassium (K)	0 - 450 mg/L K
Magnesium (Mg)	0 - 500 mg/L Mg
Calcium (Ca)	0 - 2500 mg/L Ca
Aluminium (Al)	0 - 50 mg/L Al
Ammonia Nitrogen (N)	0 - 75 mg/L N
Chloride (Cl)	0 - 1000 mg/L Cl
Copper (Cu)	0 - 25 mg/L Cu
Iron (Fe)	0 - 25 mg/L Fe
Manganese (Mn)	0 - 25 mg/L Mn
Sulfur (S)	0 - 300 mg/L S

*Ranges can be extended

SKW 500 Complete Soil Kit Contents

Photometric Testing Hardware	Soiltest 10 Bluetooth, waterproof USB cable, cuvette rack, 8 cuvettes, Check Standards set with certificate
Electrochemical Testing Hardware	Multiparameter Pocket Sensor, pH 4.0/7.0/10.0 buffer solutions, conductivity calibration standard
Reagents	Complete reagent set for 50 tests per each specified parameter including extraction and test reagents
Sample Preparation/Accessories	De-ion pack, soil sample bags, soil scoops, filter funnels and paper, sample container/dilution tubes, syringes, crush/stir rods, cuvette brush
Ancillaries	Integrated work surface, instructions, protective foam inserts, IP67 waterproof lockable carry case

SKW 400 Professional Soil Management Kit

The SKW 400 Professional Soil Management Kit provides fundamental soil nutrient testing capability with the space to add up to seven additional soil reagent packs.



The SKW 400 includes:

- Simple, field-ready soil test methods for macro nutrients (soil pH, N/P/K), calcium, magnesium and conductivity
- Includes both the Bluetooth enabled Soiltest 10 photometer and the Multiparameter Pocket Sensor
- Protected by a waterproof field case with integral work surface for soil testing in any location

Make the critical soil nutrient decisions in the field using the SKW 400 Professional Soil Management Kit.



Bluetooth data transfer



USB connectivity



Tablet reagents



Tubetest reagents

Ordering Information

SKW400	Professional Soil Management Kit
--------	----------------------------------

Technical Specification

Size (W x L x H)	555 x 428 x 211mm
Weight	9.5 kg



Soil tests included:

Parameter	Range*
Soil pH	0 - 14
Lime Requirement	0 - 34 tonne/ha
Conductivity	0 - 19.9mS/cm
Salinity	0 - 1%
Nitrate Nitrogen (N)	0 - 25 mg/L N
Phosphate (P)	0 - 150mg/L P
Potassium (K)	0 - 450 mg/L K
Magnesium (Mg)	0 - 500 mg/L Mg
Calcium (Ca)	0 - 2500 mg/L Ca

*Ranges can be extended

Kit Contents

Photometric Testing Hardware	Soiltest 10 Bluetooth, waterproof USB cable, cuvette rack, 8 cuvettes, Check Standards set with certificate
Electrochemical Testing Hardware	Multiparameter Pocket Sensor, pH 4.0/7.0/10.0 buffer solutions, conductivity calibration standard
Reagents	Complete reagent set for 50 tests per each specified parameter including extraction and test reagents
Sample Preparation/Accessories	De-ion pack, soil sample bags, soil scoops, filter funnels and paper, sample container/dilution tubes, syringes, crush/stir rods, cuvette brush
Ancillaries	Integrated work surface, instructions, protective foam inserts, IP67 waterproof lockable carry case

SK 300 Soil Management Kit

Measure soil pH, conductivity, magnesium, calcium and macronutrients nitrogen, phosphate and potassium. All using simple visual test methods in a durable soil test kit, expertly designed for field use.



The SK 300 includes:

- Visual test equipment and reagents for soil pH, lime requirement, macronutrients (N, P, K), magnesium and calcium testing
- Pocket Conductivity Sensor for soil conductivity and soluble salt testing for areas of salinisation concern
- Provided in a shoulder bag and hard case containing all components required to commence soil testing immediately

Manage soil and crop nutrition effectively using the simple visual soil test methods and Pocket Conductivity Sensor included in the SK300 Soil Management Kit.



Tablet reagents

Ordering Information

SK300	Soil Management Kit
-------	---------------------

Kit Contents

Visual Testing Hardware	Soiltester for soil pH. Soiltester for Nitrogen (N), Phosphate (P) and Magnesium (Mg). Double Tube Assembly for Potassium (K). Tablet count container for Calcium (Ca)
Electrochemical Testing Hardware	Pocket Conductivity Sensor for soil conductivity and salinity including calibration standard
Reagents	Complete reagent set for 50 tests for soil pH, lime requirement, nitrogen, phosphate, potassium, magnesium and calcium including extraction and test reagents
Sample Preparation/ Accessories	De-ion pack, soil sample bags, soil scoops, filter funnels and paper, sample container/dilution tubes, syringe, crush/stir rods, cuvette brush
Ancillaries	Shoulder bag and hard case

SK 200 Soil Fertility Kit

Measure soil pH and macronutrients: nitrogen, phosphate and potassium, in a simple visual soil test kit containing reagents and hardware for effective soil fertility monitoring.



The SK 200 includes :

- Measure soil pH, lime requirement and macronutrients (N/P/K) using simple visual soil testing methods
- Complete soil test kit including reagents and hardware contained in a single shoulder case
- Developed specifically for portable use by a range of users such as agronomists, farming and fertiliser professionals

Improve crop yield and protect the environment from over-fertilisation with simple soil macronutrient testing in a portable soil test kit.



Tablet reagents

Ordering Information

SK200	Soil Fertility Kit
-------	--------------------

Kit Contents

Visual Testing Hardware	Soil tester for soil pH. Soil tester for Nitrogen (N) and Phosphate (P). Double Tube Assembly for Potassium (K).
Reagents	Complete reagent set for 50 tests for soil pH, lime requirement, nitrogen, phosphate and potassium including extraction and test reagents
Sample Preparation/ Accessories	De-ion pack, soil sample bags, soil scoops, filter funnel and paper, sample container/dilution tubes, crush/stir rods, cuvette brush
Ancillaries	Shoulder bag

SK 100 Soil pH and Lime Requirement Kit

SoilpH is the most important single parameter for soil testing, providing not just information about the acidity or alkaline nature of soil but also the availability of key nutrients.



The SK 100 Soil pH and Lime Requirement Kit includes:

- pH Soiltester and reagents for 50 tests - clear visual soil pH testing with no requirement for calibration or maintenance
- Lime Requirement buffer tablets enhance soil pH testing by a simple follow on test to calculate lime dosing needs
- Provided in a robust field case to protect and store kit components including the unique Mini De-ion bottle

The SK 100 is a fundamental part of every crop or plant professional's toolkit, delivering rapid and reliable soil pH and lime requirement testing.



Tablet reagents

Ordering Information

SK 100	Soil pH and Lime Requirement Kit
--------	----------------------------------

Kit Contents

Visual Testing Hardware	Soiltester for soil pH and lime requirement
Reagents	Complete reagent set for 50 soil pH and lime requirement tests
Sample Preparation/ Accessories	Mini De-ion bottle, soil scoop, crush/stir rod, cuvette brush
Ancillaries	Hard case

Soil Test Reagents

Formulated specifically for simplified soil test methods, Palintest Soil Test Reagents are provided in a convenient format for both field and laboratory use.

Key features include:

- Tablet format reagents - stable for up to 10 years, easy to use and suitable for any field and laboratory use.
- Available as convenient Combination Packs including both extract and test reagents and also as individual reagent packs
- Each pack contains sufficient reagents for at least 50 tests as standard
- Palintest Soil Test Reagents are compatible with current and previous model Soil Test Kits.

		Combination Packs									
		SKR001 Soil Nitrogen Pack	SKR002 Soil Phosphorus Pack (Visual)	SKR003 Soil Phosphorus Pack (Photometer)	SKR004 Soil Potassium Pack	SKR005 Soil Magnesium/ Calcium Pack	SKR006 Soil Aluminium Pack	SKR007 Soil Ammonia Pack	SKR008 Soil Copper Pack	SKR009 Soil Iron Pack	SKR010 Soil Manganese Pack
Individual Reagent Packs	ST-2106	Extract N Powder	•								•
	ST-2116	Extract P		•	•						
	ST-2127	Extract K Powder				•					
	ST-2136	Extract A					•	•	•		
	ST-2146	Extract C							•	•	
	ST-2200	Soil pH									
	ST-2210	Lime Buffer									
	ST-2237	Nitrate N Powder	•								•
	ST-2240	Nitricol	•								
	ST-2260	Phosphate P		•	•						
	ST-2275	Acidifying (Soil)			•						
	ST-2276	Acidifying (Soil)		•							
	ST-2280	Potassium (Soil)				•					
	ST-2297	Calcium (Soil)					•				
	ST-2320	Ammonia (Soil)						•			
	ST-2345	Aluminium (Soil)					•				
	ST-2367	Chloride (Soil)									
	ST-2370	Iron mid range (Soil)								•	
	ST-2395	Manganese (Soil)									•
	ST-2410	Sulphate (Soil)									
ST-2440	Magnecol (Soil)					•					
ST-2455	Coppercol (Soil)								•		

See www.palintest.com for the full range of spares and accessories

Additional Support

**2
Year
Warranty**

Register your Photometer to take advantage of the 2 year warranty and access our full range of technical support.

For further information and support, get in touch with a member of our team:



Aqua Pal App

- Available for iOS and Android, the Aqua Pal app provides seamless data management for the Soiltest 10 Bluetooth instrument and manual data upload from any other testing device
- Track data by sample ID, operator ID and create site specific reporting and control profiles for individual customers
- Text alerts and notifications when results are outside of defined limits



Palintest Australia

1/53 Lorraine Street
Peakhurst Business Centre
Peakhurst
NSW 2210
Australia

+611300 13 15 16
palintest@palintest.com.au

Palintest China

Room 1711
Fanli Mansion
22 Chaowai Street
Chaoyang District
Beijing 100020, PRC

+86 106588 6200
china@palintest.com

Palintest UK

Palintest House
Kingsway, Team Valley
Gateshead
Tyne & Wear NE110NS
England

+44 (0) 1914910808
sales@palintest.com

Palintest USA

400 Corporate Circle
Suite J,
Golden
CO 80401USA


+1720-221-6878
info@palintestusa.com

Regular calibration and service will keep your instrument operating at optimum performance.

For enquires visit our website at:

www.palintest.com

Simply complete the form, and one of our team will get in touch.

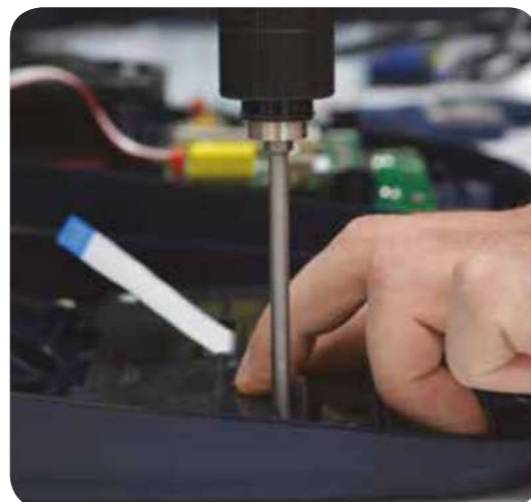

Stay in touch @Palintest



Distributed By:

Camlab Ltd
Unit 24, Norman Way Industrial Estate
Over, Cambridge, CB24 5WE, United Kingdom
T: +44 (0) 1954 233 110 E: sales@camlab.co.uk



Palintest

Water Analysis Technologies

A HALMA COMPANY

www.palintest.com

Palintest Australia

1/53 Lorraine Street
Peakhurst Business Centre
Peakhurst
NSW 2210
Australia

+611300 13 15 16
palintest@palintest.com.au

Palintest China

Room 1711
Fanli Mansion
22 Chaowai Street
Chaoyang District
Beijing 100020, PRC

+86 106588 6200
china@palintest.com

Palintest UK

Palintest House
Kingsway, Team Valley
Gateshead
Tyne & Wear NE110NS
England

+44 (0) 1914910808
sales@palintest.com

Palintest USA

400 Corporate Circle
Suite J,
Golden, CO 80401
USA

+1720 2216878
info@palintestusa.com