



3M™ Versaflo™ M-300 Series Helmets

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance.

► Before Use

- Inspect for damage and replace if necessary:
 - Face seal – ensure it is inserted properly and free from splits and tears
 - Visor - surround and gasket
 - Forehead seal
 - Head harness
 - Comfort pad/s
- Replace Peel Off visor covers (if used).

► Monthly

- Carry out all the 'Before Use' inspections and create record of this monthly check for the hood.

► After Use


- Clean with cloth dampened with a mild solution of water and liquid household soap.
- Disinfect with 3M 105 Wipes.
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents.

► Ordering Consumables, Repair Parts and Accessories

To request a quote or place an order for these items, please contact your 3M Approved Distributor.

► Further Information and Advice

If you require additional guidance on the Care and Maintenance of your 3M Powered and Supplied Air Equipment, please contact the Helpline or your local 3M representative.

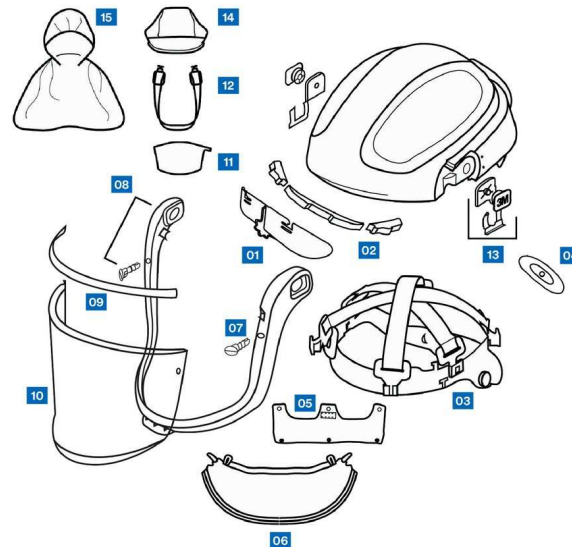

Description	Part N°
Versaflo M-306 Respiratory Helmet, with Coated Visor and Comfort Face Seal	M-306
Versaflo M-307 Respiratory Helmet, with Coated Visor and Flame Resistant Face Seal	M-307
Accessories and spare parts	
01 Airflow Deflector	M-316
02 Forehead Seal	M-350
03 Head Suspension	M-354
04 Size Reducing Ratchet Comfort Pad	M-956
05 Forehead Comfort Pad	M-957
06 Standard Face Seal	M-935
06 Comfort Face Seal (M-306)	M-936
06 Flame Resistant Face Seal (M-307)	M-937
07 Visor Frame Buttons	M-919
08 Visor Frame Assembly	M-920
09 Visor Gasket	M-921
10 Molten Metal Visor	M-925
10 Coated Visor	M-927
11 Peel-Off Visor Covers	M-928
12 Chin Strap	M-958
13 Visor Pivot Kit	M-960
14 Flame Resistant Headtop Cover	M-972
15 Head, Neck and Shoulder Cover	M-976

Helmet mounted ear defenders are available. Please contact 3M for details.

Replace all damaged parts immediately to ensure correct levels of protection.

3M Personal Safety Division
3M United Kingdom plc
3M Centre, Cain Road
Bracknell, Berkshire RG12 8HT
United Kingdom
Tel: 0870 60 800 60
www.3M.co.uk/safety

3M Ireland Limited
The Iveagh Building
The Park
Carrickmines
Dublin 18
Tel: 1 800 320 500

Please recycle. Printed in UK.
3M is trademarks of the 3M company.
© 3M 2015. All rights reserved.
J308790



CHM300CMP
To download this poster please visit:
www.3M.co.uk/maintenancepack or scan the QR code.

For more information on all our products, call 3M Personal Safety Division on 0870 60 800 60 (UK) and 1800 320 500 (Ireland) or visit www.3M.co.uk/safety

@3M_UK_Safety



3M Health & Safety Helpline

Monday - Friday 9 to 5

0870 60 800 60 - UK

1 800 320 500 - IRELAND