

# Oxygen (dissolved)



Schott Handylab Dissolved Oxygen Meter Model OX12-SET

## Schott Handylab Dissolved Oxygen Meter Model OX12-SET


Battery operated meter suitable for the measurement of dissolved oxygen and temperature. Also allows for the influence of high salt content to be compensated for by entering the measured salinity.

### Features:

- Ranges 0 to 19.99mg/l and 0 to 90mg/l
- 0 to 50°C
- 2500 hours battery life
- Low battery indicator
- Data storage of 500 records
- RS232 interface

Handylab DO Meter Model OX12 complete with sensor, maintenance accessories and instructions.

Reference: SC/28.520.2793 £960.00

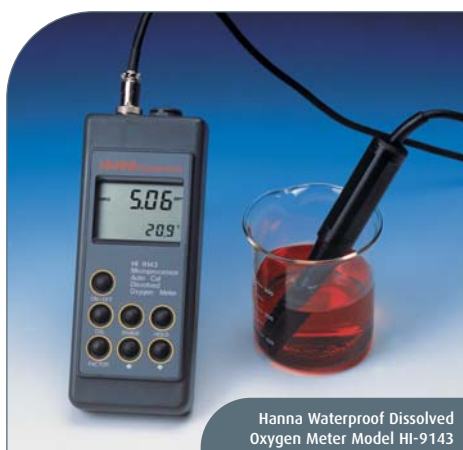

Hanna Waterproof Dissolved Oxygen Meter Model HI-9143

## Hanna Waterproof Dissolved Oxygen Meter Model HI-9143

A rugged meter with the added protection of a water proof casing and 2 year warranty making ideal for field use. A sophisticated microprocessor controlled unit includes automatic compensation for temperature, salinity and altitude. For user convenience calibration is automatic and needs no chemical solutions. Just expose the probe to air, press the CAL button and the meter will be calibrated ready for use in just a few minutes.

### SPECIFICATIONS

Ranges: 0.0 to 45.00mg/l, 0.0 to 300% and 0.0 to 50.0°C.

Temperature compensation: Auto from 0 to 50°C

Battery life 200hours

Altitude compensation from 0 to 1900m in 100m steps

Salinity compensation from 0 to 40g/l in 1g/l steps.

Reference: HI/9143 £620.00