



In-Situ Inc.

NEW!

Water Level TAPES

BUILT TO LAST

200ft
60M.


1-800-446-7488
com

**Introducing In-Situ® Level Tape 100 and Level Tape 200,
long-lasting water level tapes for accurate measurement
of depth to water in wells or bore holes.**

CALL 1-800-446-7488 • 1-970-498-1500 • SEE THE WATER LEVEL TAPES AT WWW.IN-SITU.COM

Introducing the **NEW Water Level TAPES** from In-Situ.

Level TAPE 100 **Tape:** Easily readable black print on white tape. High quality, Kevlar® reinforced, polyethylene tape, with stainless steel conductors and graduated in **feet by 0.01 ft** or **meters by mm**.

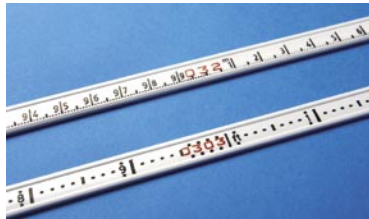


Probe: Constructed of stainless steel and Teflon® with a diameter of .63" (16 mm) and length of 7.5" (190 mm). Probe is fully sealed and pressure tested to the full length of the tape.

Power: Operated by an easy to change, single 9V battery and signaled by an audible buzzer and a bright LED light.

Reel: A rugged nylon (less than 500 ft) or aluminum (over 500 ft) reel mounted on a steel frame with an ergonomic hand grip. Reel lock and casing hanger are built into the frame.

Level TAPE 200 **Tape:** Easily readable black print on yellow tape. Heavy duty polyethylene jacketed tape manufactured and tested to ASME requirements. Scales are graduated in **feet by 0.01 ft** or **meters by mm** and printed below the jacketing to ensure readability.

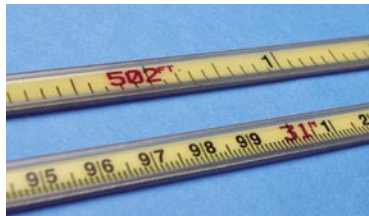

Probe: Constructed of stainless steel and Teflon® with a diameter of .63" (16 mm) and length of 7.5" (190 mm). Probe is fully sealed and pressure tested to the full length of the tape.

Power: Operated by an easy to change, single 9V battery and signaled by an audible buzzer with the ability to increase or decrease sensitivity at the touch of a button.

Reel: A rugged nylon (less than 500 ft) or aluminum (over 500 ft) reel mounted on a steel frame with an ergonomic hand grip. Reel lock and casing hanger are built into the frame. Padded carrying bag included.

Water Level TAPES

SPECIFICATIONS & COMPARISON

Specifications for the Level TAPE 100 and the Level TAPE 200

Reel Weight	5 lb (2 kg)
Tape Weight per 100 ft (30 m)	1.0 lb (0.5 kg)
Height Reel & Frame	13.5 in (34 cm)
Tape Lengths available:	100 ft/30 m
	150 ft/50 m
	200 ft/60 m
	300 ft/100 m
	500 ft/150 m
	200 m
	1000 ft/300 m
	1500 ft/450 m
	2000 ft/600 m



Level TAPE 100



Level TAPE 200

Comparisons

Polyethylene Tape with SS Conductors	Yes	Yes
ASME Standards	No	Yes
Printing Under Tape Jacket	No	Yes
Choice of Feet or Meters	Yes	Yes
Modular Electronic Panel (replaceable)	Yes	Yes
Safety Link on Tape to Prevent Breakage	Yes	Yes
Sensitivity Adjustment	No	Yes
Touch Pad Control	No	Yes
Automatic Shut Off	Yes	Yes
Tensile Strength of Tape	100 lb	> 300 lb
Ergonomic Grip	Yes	Yes
Stainless Steel Axle	Yes	Yes
Carrying Bag Included	No	Yes



PURCHASE • RENT • LEASE WATER LEVEL TAPES TODAY!



In-Situ Inc.

The Standard for Water Quality & Level

221 East Lincoln Avenue • Fort Collins, CO 80524 USA
Telephone: 970-498-1500 • Fax: 970-498-1598

1-970-498-1500 • 1-800-446-7488

(international and domestic calls) (toll-free in US and Canada)

WWW.IN-SITU.COM

This information is subject to change without notice. Copyright © 2007 In-Situ Inc. All rights reserved. In-Situ is a registered trademark of In-Situ Inc. Kevlar and Teflon are registered trademarks of El DuPont.

4/30/2007